


RTP-632

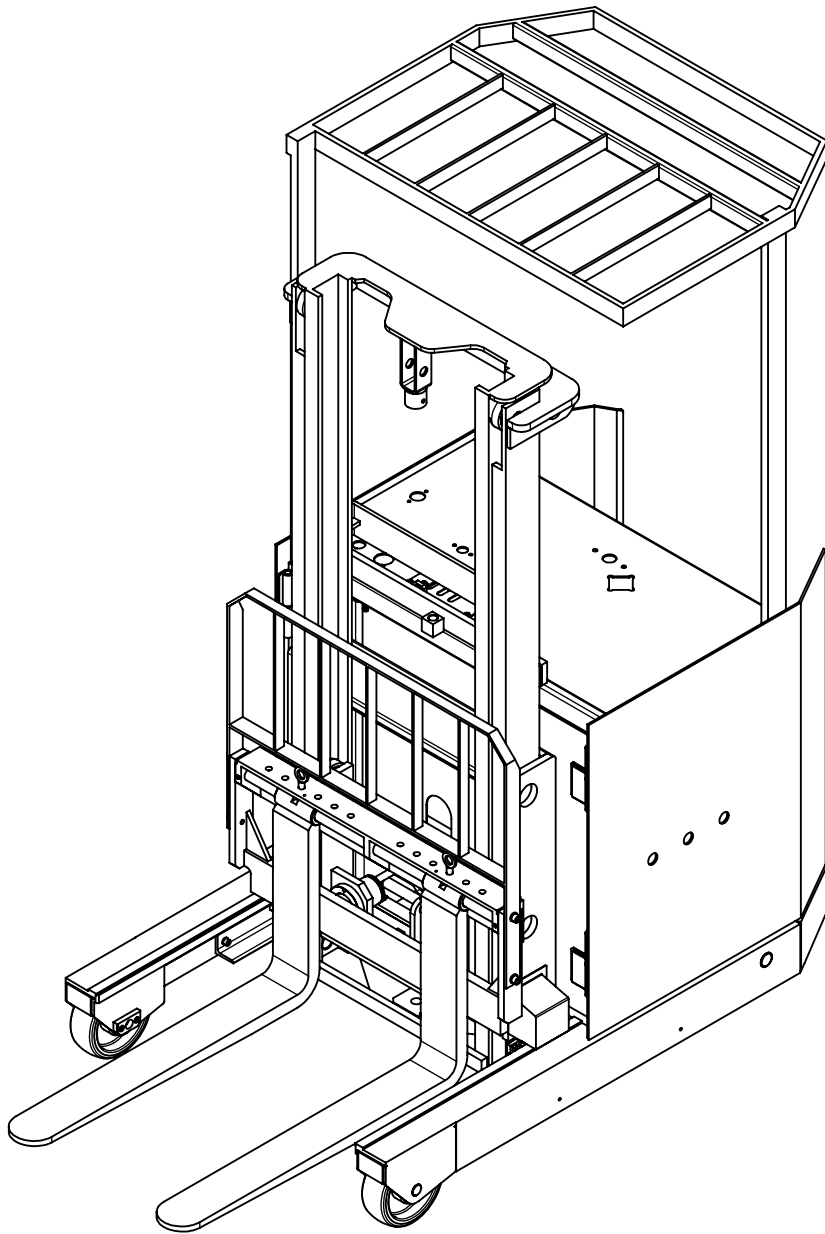


目 次

1. 目次	1
2. FRAME	2
3. MAST	4
4. FORK PARTS	6
5. STEERING PARTS	8
6. DRIVE	10
7. BRAKE	12
8. OIL PIPING	14
9. LIFT CYLINDER	18
10. REACH CYLINDER	20
11. TILT CYLINDER	22
12. OIL TANK	24
13. ELECTRICAL PARTS1	26
14. ELECTRICAL PARTS2	28
15. ELECTRICAL PARTS3	30
16. CONTROLLER	32
17. MAGNET SWITCH1	34
18. MAGNET SWITCH2	36
19. DRIVE MOTOR	38
20. OIL MOTOR	40
21. CHARGER	42

FRAME

RTP-632

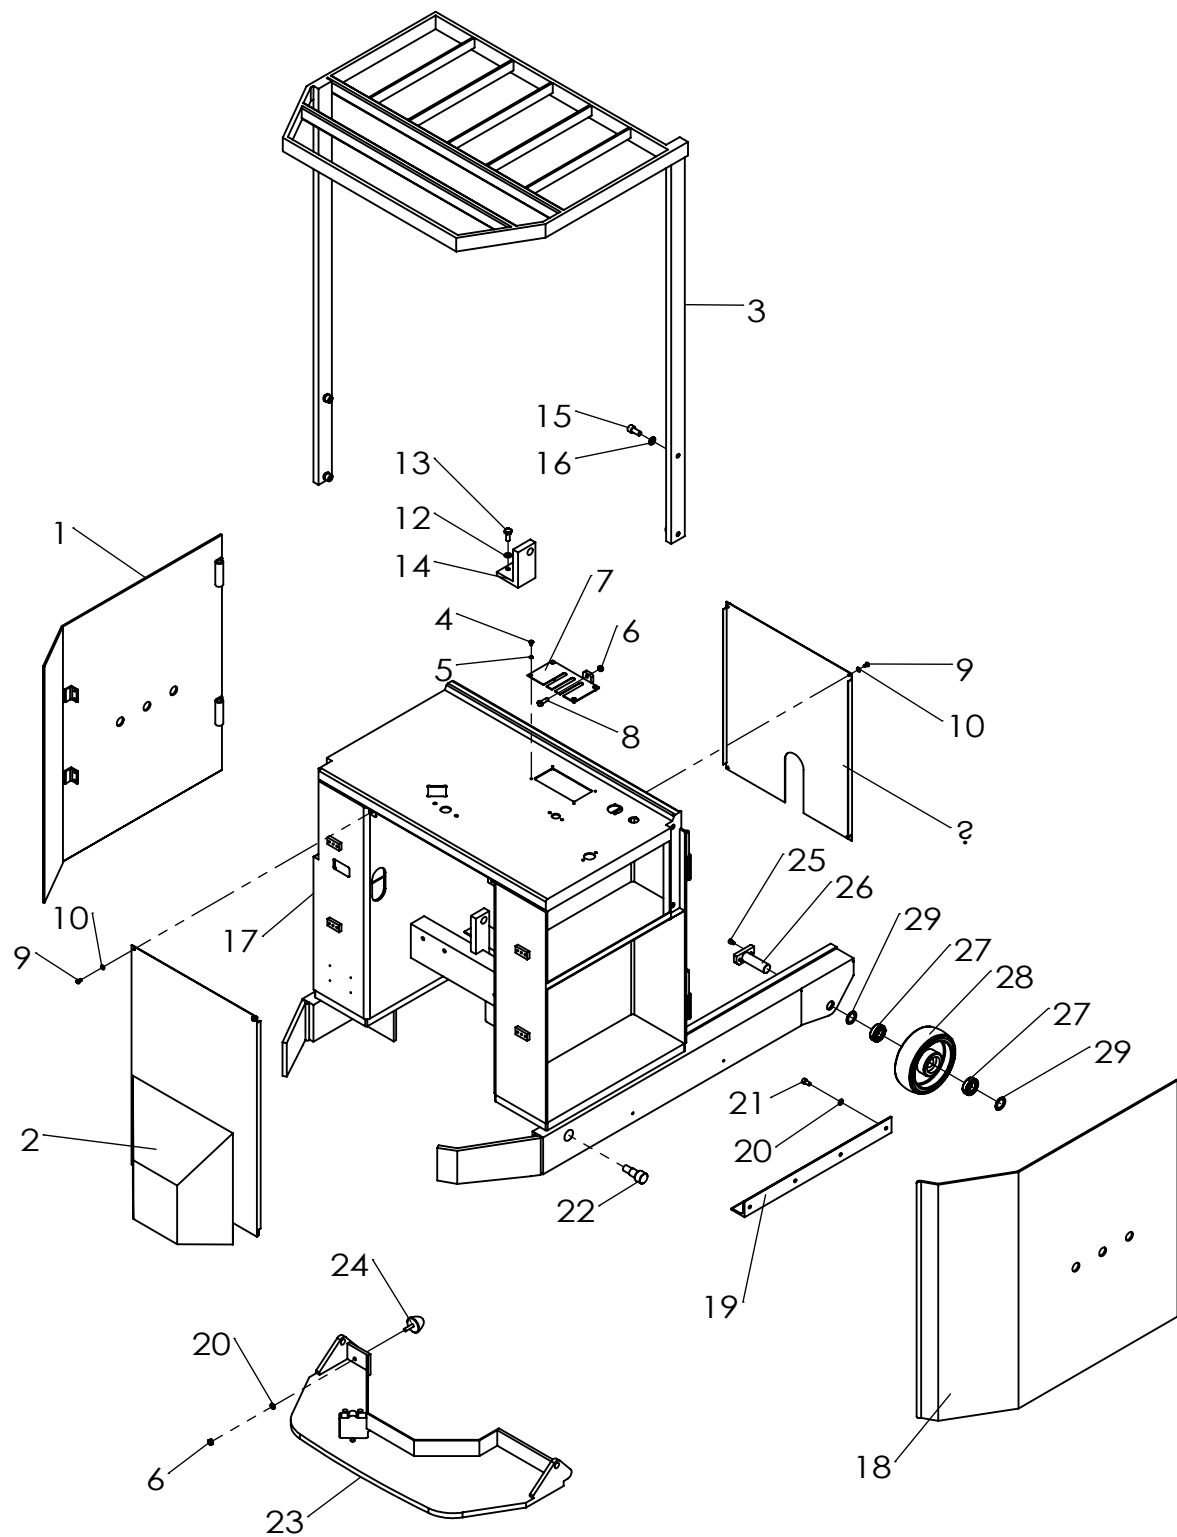


FRAME

RTP-632

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1603-0100	SIDE COVER L	1	2007118E-1
2	1603-0101	REAR COVER	1	2007117D-1
3	1603-0102	HEAD GUARD	1	E-7119D
4	MS-0510T	P+BOLT M5x10	4	
5	SW-05	SW M5	4	
6	HN-08	H-NUT M8	3	
7	1603-0116	VALVE COVER	1	4004992B
8	HB-0825	H-BOLT M8x25	1	
9	MS-0610N	P-BOLT M6x10	6	
10	SW-06	SW M6	6	
11	1603-0104	FRONT COVER	1	2007117D-2
12	SW-10	SW M10	2	
13	HB-1025	H-BOLTS_M10x25	2	
14	1603-0105	REACH CYLINDER BKT	1	EX-5612A
15	CS-1225	HS-BOLT M12x25	4	
16	SW-12	SW M12	4	
17	1603-0117	FRAME	1	2011648F
18	1603-0108	SIDE COVER R	1	2007118E-2
19	1603-0109	REACH ROLLER GUIDE	2	E-7123A-2
20	SW-08	SW M8	10	
21	CS-0815	HS-BOLT M8x15	8	
22	1603-0110	STEP PIN	2	E-0913B-1
23	1603-0111	STEP	1	2007117D-3
24	0060-0004	RUBBER CUSHION	2	EH-1003
25	CS-0610	HS-BOLT M6x10	4	
26	1603-0112	LOAD WHEEL SHAFT	2	A-0490E-4
27	BB-6005ZZ	BALL BEARING 6005ZZ	4	
28	1602-1000	LOAD WHEEL_ ϕ 180x62	2	
29		SHIM ϕ 36x ϕ 25.3x1.6	4	

MAST

RTP-63

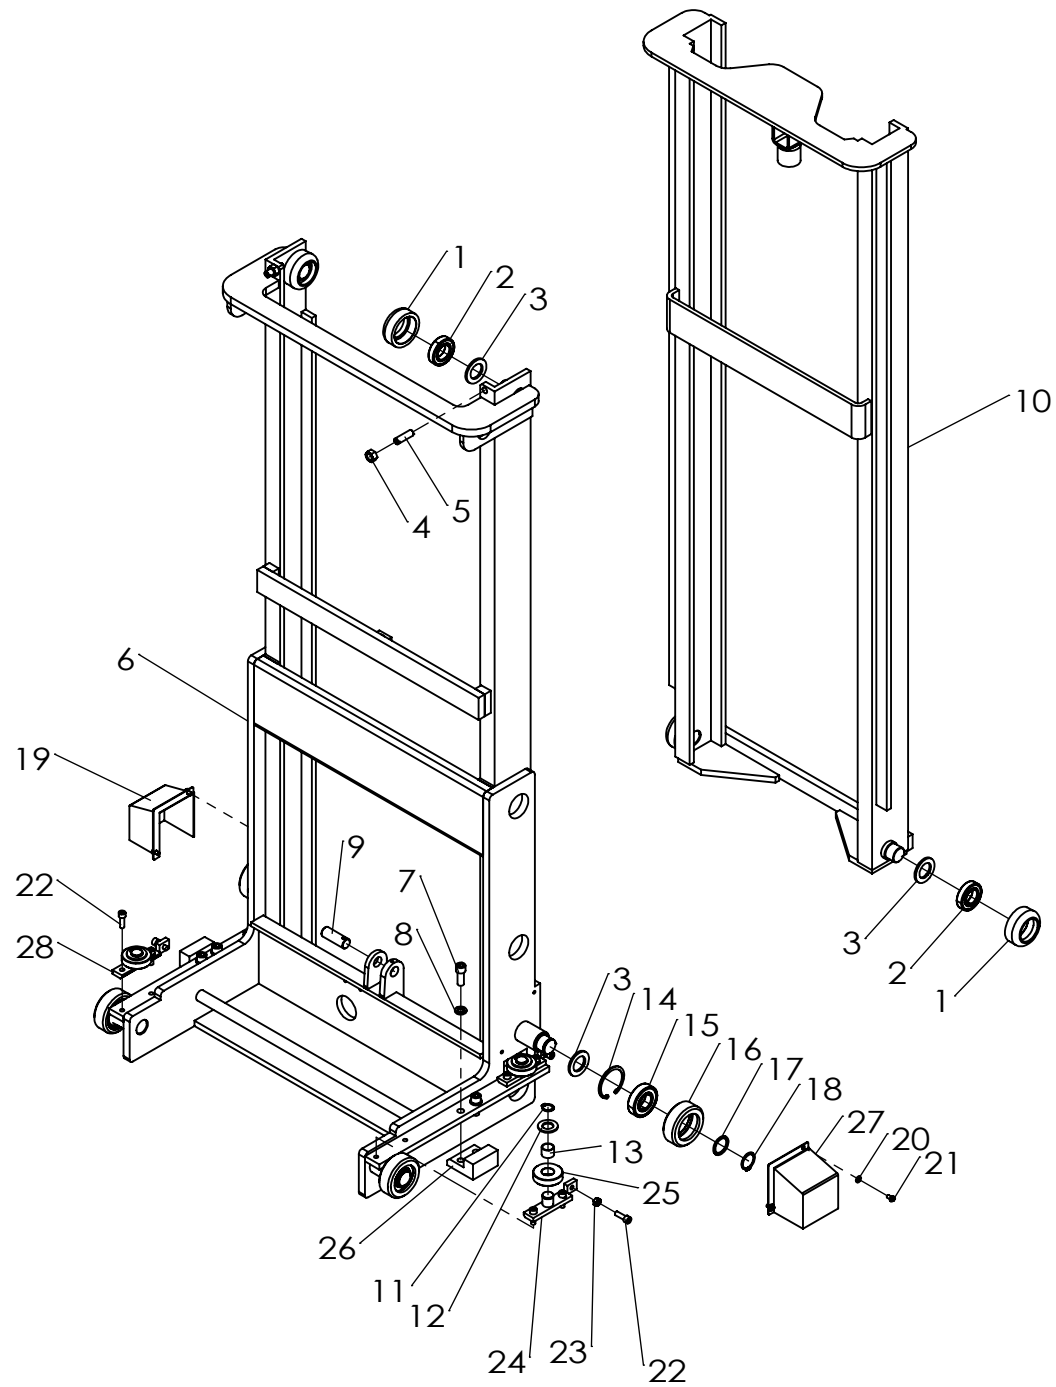


MAST

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1603-1500	MAST ROLLER	4	EX-1198B
2	BB-6006ZZ	BALL BEARING 6006ZZ	4	
3	1603-0201	SHIM_ ϕ 50x ϕ 31x4	8	
4	HN-12	H-NUT M12	2	
5	1603-0202	SLIDE PIN	2	EX-1601
6	1603-0215	OUTER MAST	1	E-7124G
7	CS-1230	HS-BOLT M12x30	4	
8	SW-12	SW M12	4	
9	1603-0204	REACH CYLINDER PIN	1	4008054
10	1603-0205	INNER MAST	1	E-7127C
11	SRS-19	SNAP RING S-19	4	
12	0021-0020	WASHER_ ϕ 37x ϕ 21x3	4	
13	0110-0001	METAL_ ϕ 20x ϕ 23x15	4	
14	SRR-62	SNAP RING R-62	4	
15	BB-6206ZZ	BALL BEARING 6206ZZ	4	
16	1603-0208	REACH ROLLER	4	E-7123A-4
17	1603-0213	WASHER_ ϕ 38x ϕ 30. 5x2	4	
18	SRS-30	SNAP RING S-30	4	
19	1603-0209	ROLLER COVER-L	1	E-7123A-1
20	SW-06	SW M6	4	
21	MS-0610N	P-BOLT M6x10	4	
22	0002-0825	HS-BOLT M8x25	12	
23	HN-08	H-NUT M8	4	
24	1603-0210	GUIDE ROLLER BRACKET-R	2	EX-6852A-2
25	1603-0211	GUIDE ROLLER	4	EX-6852A-1
26	1603-0212	STOPPER	2	EX-5500
27	1603-0209	ROLLER COVER-R	1	E-7123A-1
28	1603-0210	GUIDE ROLLER BRACKET-L	2	EX-6852A-2

FORK PARTS

RTP-63

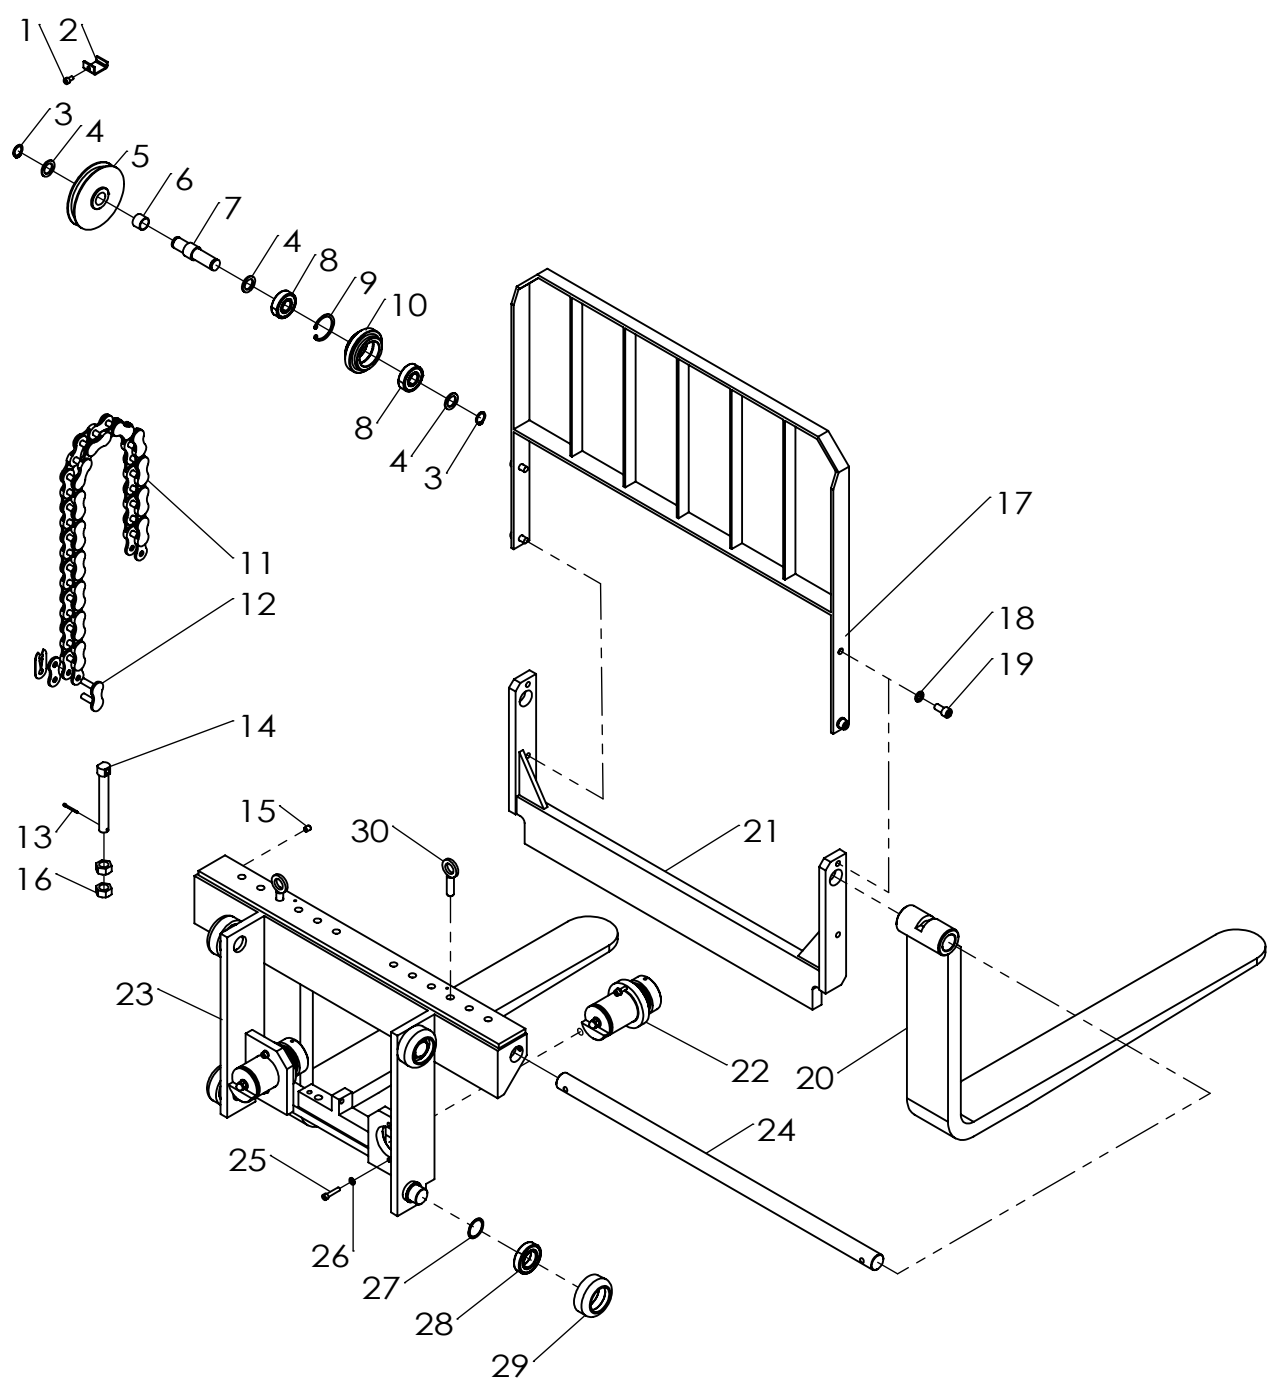


FORK PARTS

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	CS-0610	HS-BOLT M6x10	1	
2	1603-0401	STOPPER	1	EX-5967A
3	0040-1019	SNAP RING S-19	2	
4	1603-0402	WASHER_ ϕ 30x ϕ 20x2. 3	3	
5	1603-0403	HOSE PULLEY	1	E-7123A-7
6	0110-0002	METAL_ ϕ 20x ϕ 23x15	1	
7	1603-0404	PULLEY PIN	1	E-7123A-8
8	BB-6204ZZ	BEARING 6204ZZ	2	
9	0040-2047	SNAP RING R-47	1	
10	1603-0405	CHAIN WHEEL	1	E-7359B
11	1603-0406	CHAIN RS60	1	
12	1405-0405	CHAIN JOINT	1	
13	SP-0325	SPLIT PIN ϕ 3x25	1	
14	1405-0405	CHAIN END BOLT	1	EX-1268D
15	SS-0810	S-BOLT M8x10	2	
16	HN-16	H-NUT M16	2	
17	1603-0409	BACK REST	1	E-7330B-1
18	SW-10	SW M10	4	
19	0002-1020	HS-BOLT M10x20	4	
20	1603-0410	FORK	2	E-9453
21	1603-0411	CARRIAGE	1	E-7870
22	1603-0412	TILT CYLINDER	2	2007099D
23	1603-0413	BASE CARRIAGE	1	2007968E
24	1603-0414	FORK SHAFT	1	E-9453-3
25	CS-0630	HS-BOLT M6x30	4	
26	SW-06	SW M6	4	
27	1500-1514	SHIM_ ϕ 37x ϕ 31x0. 8	12	
28	BB-6006ZZ	BALL BEARING 6006ZZ	4	
29	1603-1500	ROLLER	4	EX-1198B
30	1602-0308	FORK PIN	2	EX-1182A

STEERING PARTS

RTP-63, RTP-53A

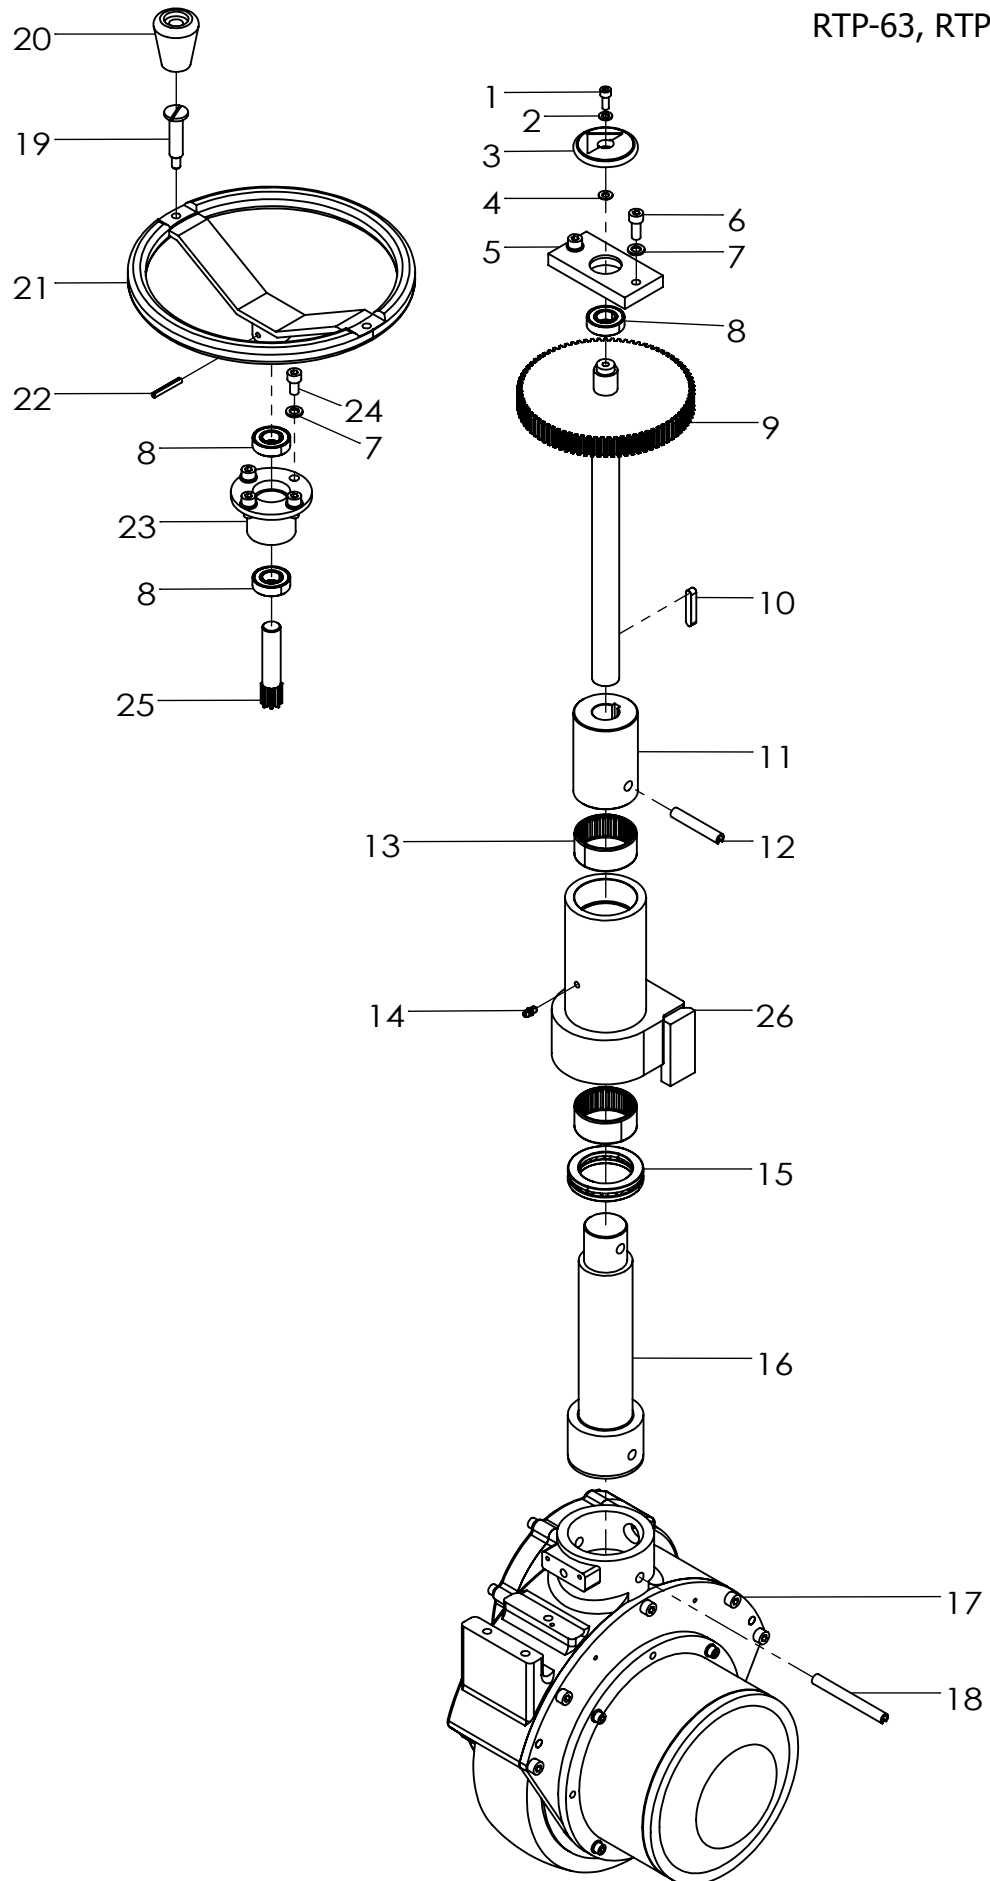


STEERING PARTS

RTP-63, RTP-53A

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	CS-0615	HS-BOLT M6x15	1	
2	SW-06	SW M6	1	
3	1603-1601	INDICATOR	1	E-0900-2
4	PW-06	PW M6	1	
5	1603-1602	BEARING CASE A	1	EX-6884
6	0002-0820	HS-BOLT M8x20	2	
7	SW-08	SW M8	6	
8	BB-6003ZZ	BALL BEARING 6003ZZ	3	
9	1603-1603	HANDLE SHAFT GEAR	1	EX-6881-6882
10	BK-0740	KEY 7x40	1	
11	1603-1904	COUPLING	1	EX-0730
12	RP-1060	ROLL PIN ϕ 10x60	1	
13	NB-HK5025	NEEDLE BEARING HK5025	2	
14	0075-0601	GREASE NIPPLE M6	1	
15	FS-51110	THRUST BEARING 51110	1	
16	1405-1903	DRIVE BRACKET PIN	1	EX-127A
17	1603-0800	DRIVE UNIT	1	
18	RP-1090	ROLL PIN ϕ 10x90	1	
19	1603-1604	KNOB BOLT	1	EX-0540
20	1603-1605	KNOB	1	EX-0539
21	1603-1606	HANDLE	1	E-2208B
22	RP-0535	ROLL PIN ϕ 5x35	1	
23	1603-1607	BEARING CASE B	1	EX-6885A
24	CS-0815	HS-BOLT M8x15	4	
25	1603-1608	PINION GEAR	1	EX-6883
26	1405-1902	DRIVE METAL	1	E-2947

DRIVE

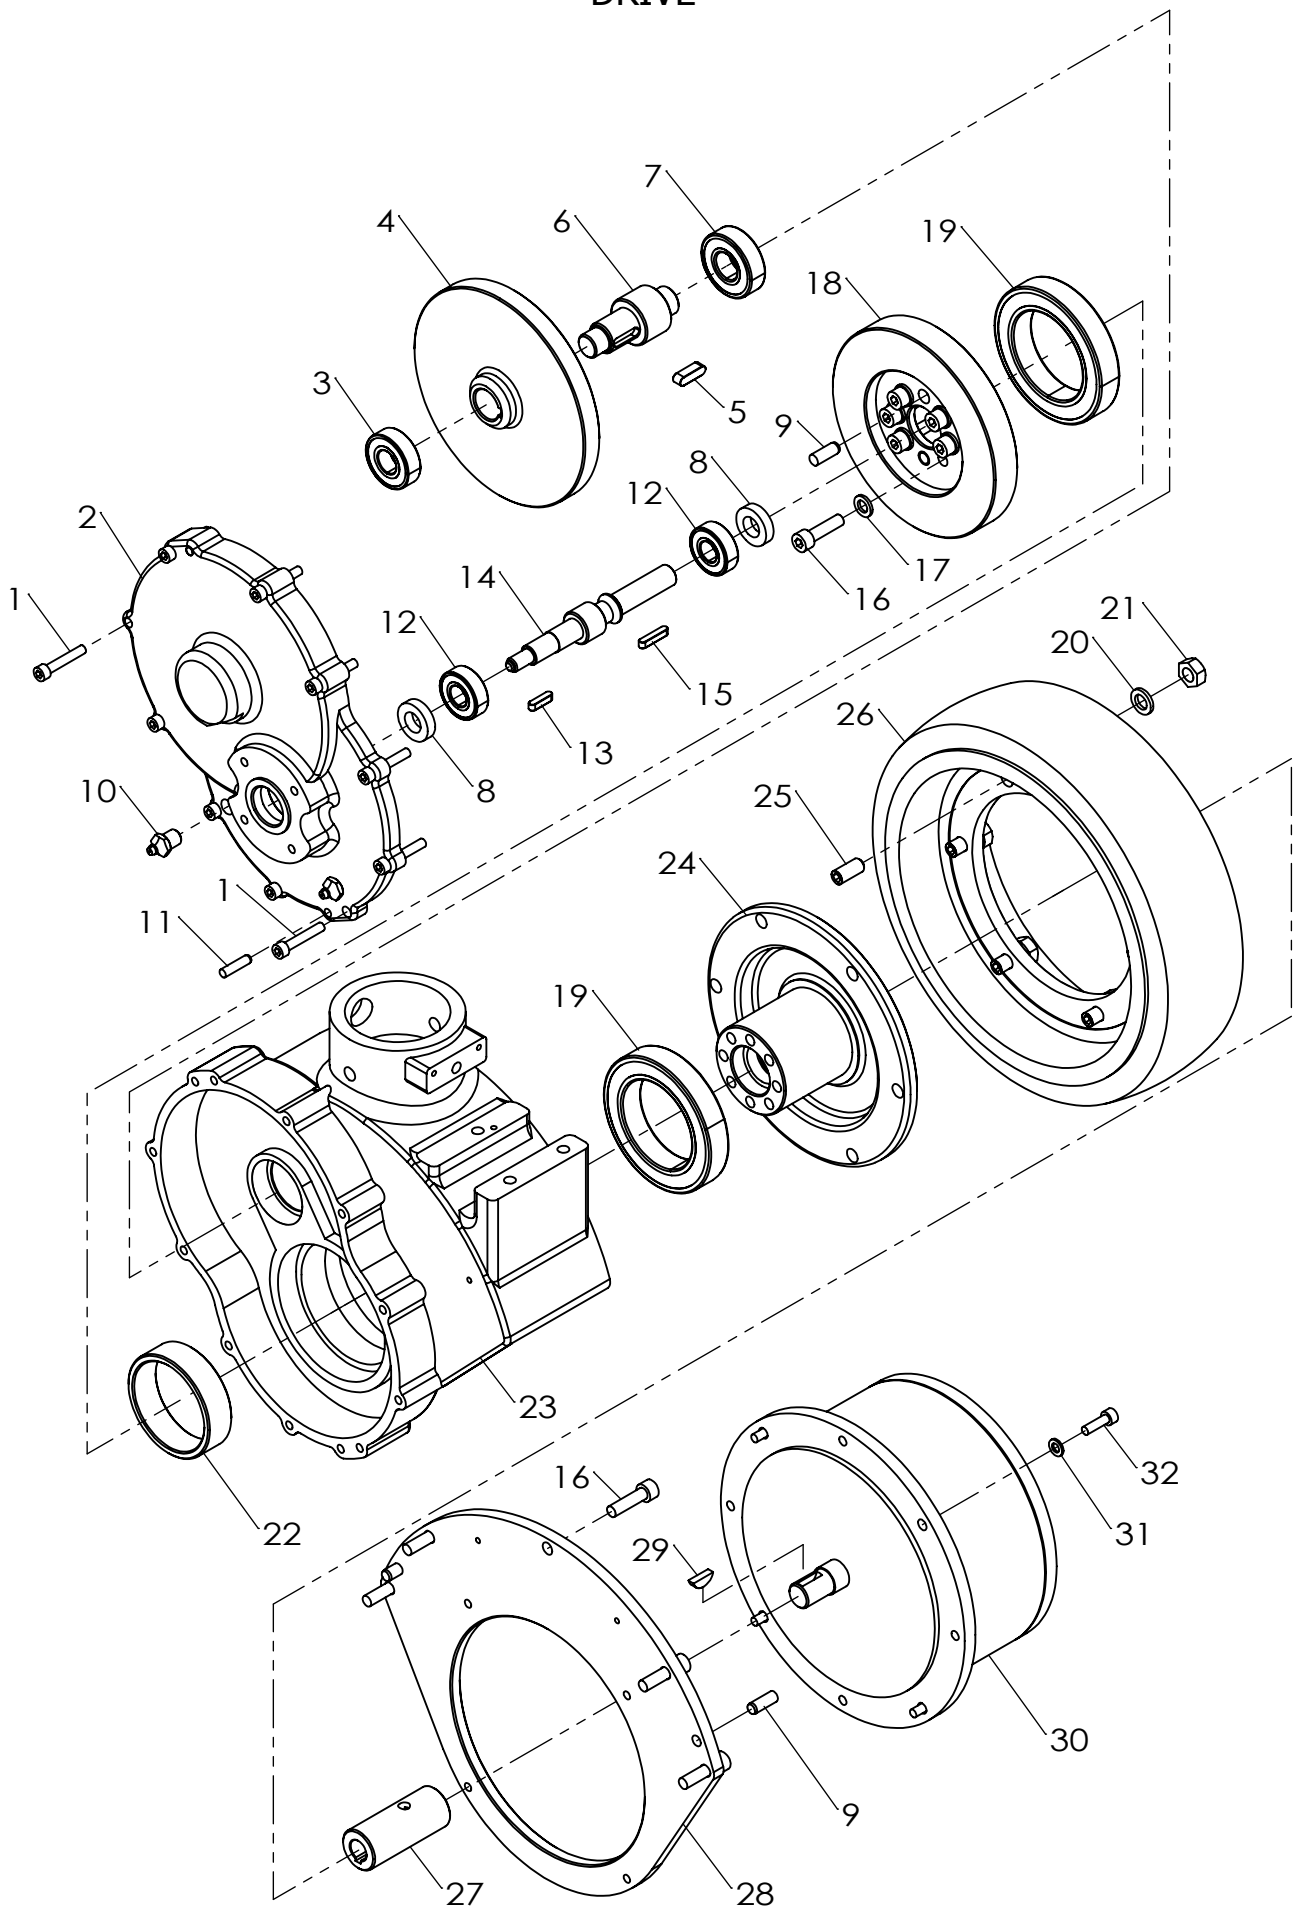

DRIVE

RTP-63, RTP-53A

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	CS-0635	HS-BOLT M6x35	10	
2	1603-0801	COVER	1	3002866
3	BB-6203ZZ	BALL BEARING 6203ZZ	1	
4	1603-0802	HELICAL GEAR	1	4010150
5	BK-0724	KEY 7x24	1	
6	1603-0803	SPUR PINION	1	4010151
7	BB-6204ZZ	BEARING 6204ZZ	1	
8	0067-0010	OIL SEAL	2	AC15287
9	PP-0822	PARALLEL PIN 8x22	4	
10	0075-1401	GREASE NIPPLE 1/4	2	
11	PP-0625	PARALLEL PIN 6x25	2	
12	BB-6202ZZ	BALL BEARING 6202ZZ	2	
13	BK-0520	KEY 5x20	1	
14	1603-0804	INPUT SHAFT	1	4010149
15	BK-0525	KEY 5x25	1	
16	CS-0830	HS-BOLT M8x30	11	
17	SW-08	SW M8	6	
18	1603-0805	SPUR GEAR	1	4010152
19	BB-6013DDU	BALL BEARING 6013DDU	2	
20	SW-10	SW M10	6	
21	HN-10	H-NUT M10	6	
22	1603-0806	COLLAR	1	4010153
23	1603-0807	CASING	1	2012416A
24	1603-0808	TIRE BOSS	1	3002871
25	SS-1022	S-BOLT M10x22	6	
26	1603-0809	TIRE 285x80 URETHANE	1	
27	1100-0805	COUPLING	1	EX-3769
28	1603-0810	MOTOR MOUNTING PLATE	1	3002870
29	HK-0519	HALF KEY 5x19	1	
30	9204-0001	MOTOR ASSEMBLY	1	3002878


DRIVE

RTP-63, RTP-53A

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
31	SW-06	SW M6	4	
32	CS-0620	HS-BOLT M6x20	4	
	1603-0800	DRIVE ASSY	1	

BRAKE

RTP-63

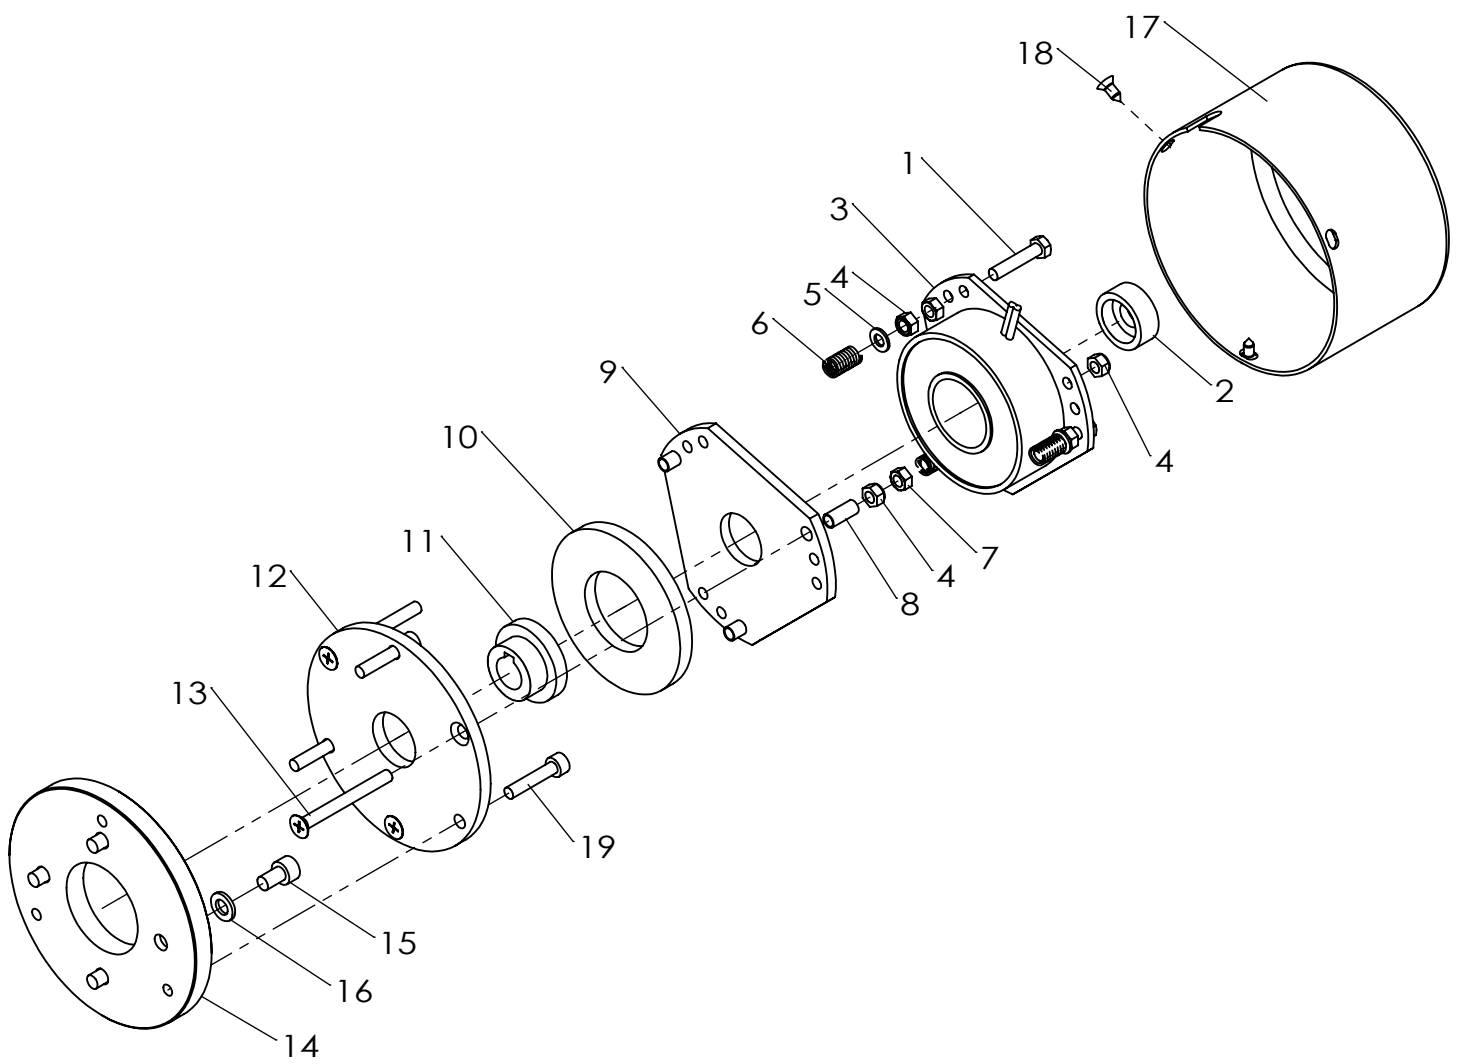


BRAKE

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	HB-0525	H-BOLT M5x25	3	
2	1602-0901	SPACER	1	EX-4907C-2
3	1309-0902	FIELD	1	
4	UN-05	U-NUT M5	9	
5	PW-05	PW M5	3	
6	1309-0913	SPRING	3	
7	HN-05	H-NUT M5	3	
8	1309-0909	COLLAR	3	
9	1309-0905	ARMATURE	1	
10	1309-0906	DISK	1	
11	1309-0907	INNER DRIVER	1	
12	1309-0908	MOUNTING PLATE	1	
13	MS-0550S	F-BOLT M5x50	3	
14	1602-0902	BASE	1	EX-4907C-1
15	CS-0610	HS-BOLT M6x10	4	
16	SW-06	SW M6	4	
17	1602-0903	COVER	1	EX-4907C-3
18	HS-0410	TAPPING SCREW M4x10	2	
19	CS-0525	HS-BOLT M5x25	3	
	1309-0910	BREAK ASSY	1	MNB0. 6

OIL PIPING

RTP632-T1

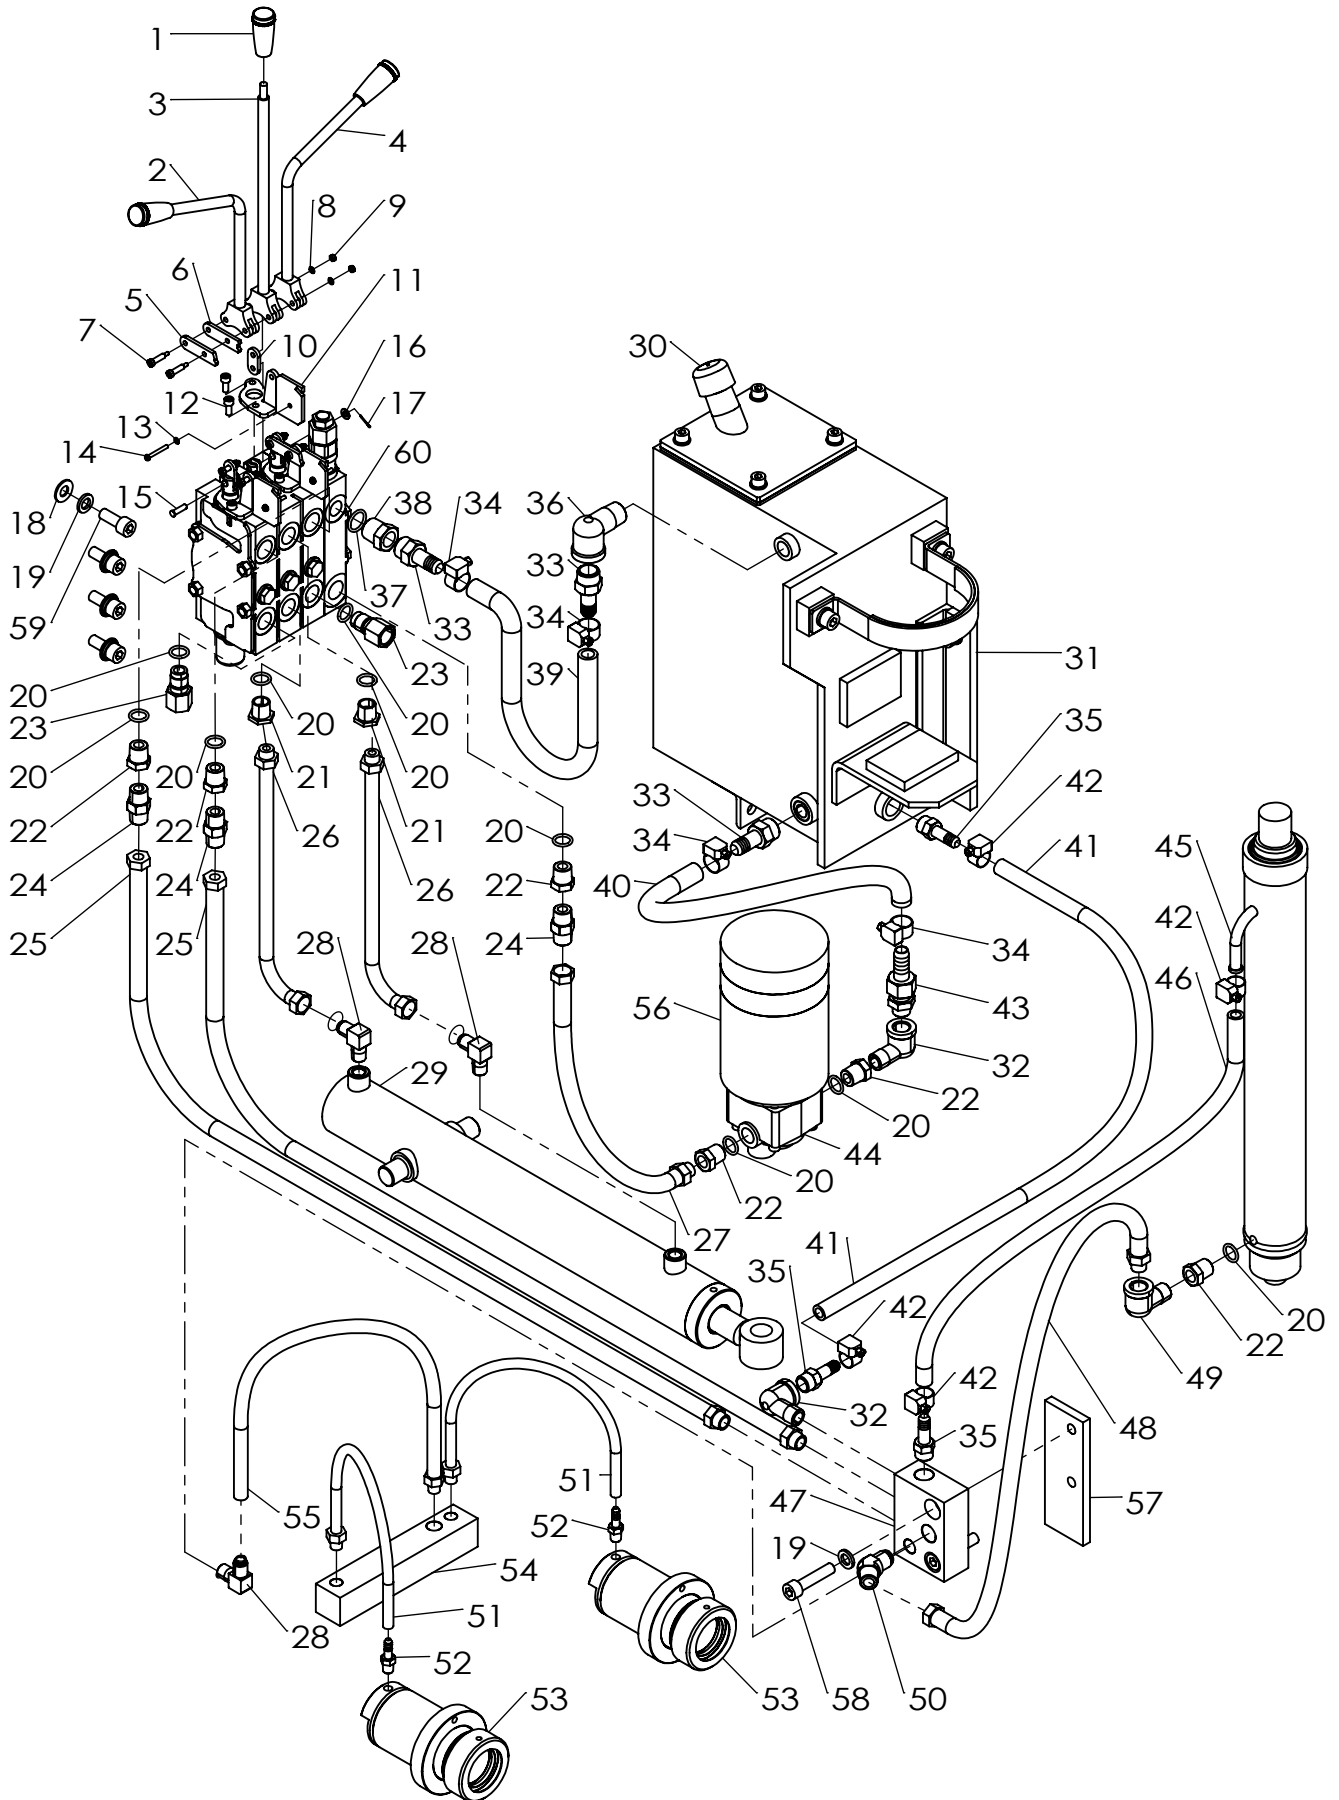

OIL PIPING

RTP632-T1


NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	0062-0003	LEVER KNOB	3	
2	0170-0007	VALVE LEVER 220ARL LIFT	1	EX-4476A, VP-184-340
3	0170-0008	VALVE LEVER 220ARR REACH	1	EX-4476A, VP-184-340
4	0170-0009	VALVE LEVER 220ART TILT	1	EX-4476A, VP-184-340
5	0170-0021	CAM A	2	4009417
6	0170-0022	CAM B	1	4009418
7	0170-0011	LEVER PIN	6	
8	LW-03I	CON-SW $\phi 3$	6	
9	HN-03	H-NUT M3	6	
10	0170-0012	LINK	3	
11	0170-0013	LIMIT BRACKET	3	4009420B
12	CS-0512	HS-BOLT M5x12	6	
13	SW-03	SW M3	3	
14	MS-0325N	P-BOLT M3x25	3	
15	0170-0014	LINK PIN	3	
16	0170-0015	WASHER	3	
17	SP-0110	SPLIT PIN $\phi 1 \times 10$	3	
18	PW-10	PW M10	4	
19	SW-10	SW M10	6	
20	ORP-14	O-RING P14	10	
21	0080-0018	BUSHING PF3/8xPT1/4	2	
22	0080-0006	BUSHING PF3/8xPT3/8	6	
23	0091-0319	VALVE PLUG PF3/8	2	
24	0073-1318	NIPPLE HP PT3/8xPT3/8	3	
25	0102-9135	Hose HP 3/8 x 1330	2	
26	0102-6060	Hose HP 1/4 x 600	2	
27	0102-9060	Hose HP 3/8 x 600	1	
28	0080-0009	ELBOW 9000° 1/4x1/4	3	
29	1603-0700	REACH CYLINDER	1	
30	1603-1301	TANK CAP	1	4007377B

OIL PIPING

RTP632-T1

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
31	1603-1300	OIL TANK	1	
32	0080-0001	STREET ELBOW 3/8	2	
33	0073-0112	HOSE NIPPLE 14x1/2	3	
34	0105-0019	HOSE BAND ϕ 19	4	
35	0073-0318	HOSE NIPPLE 3/8x ϕ 10.5	3	
36	0080-0008	STREET ELBOW 1/2	1	
37	ORP-18	O-RING P18	1	
38	0080-0005	BUSHING PF1/2xPT1/2	1	
39	0101-1218	VINYL HOSE ϕ 12x ϕ 18x450L	1	
40	0101-1218	VINYL HOSE_ ϕ 12x ϕ 18x220L	1	
41	0101-0915	VINYL HOSE_ ϕ 9.5x ϕ 15x1500L	1	
42	0105-0016	HOSE BAND ϕ 16	4	
43	0073-0319	HOSE NIPPLE 3/8x ϕ 14	1	
44	1405-1102	GEAR PUMP YP10-2.5	1	
45	1501-0507	LIFT CYLINDER S=1250	1	
46	0101-0915	VINYL HOSE_ ϕ 9.5x ϕ 15x1600L	1	
47	1603-1207	RELAY BLOCK	1	EX-5009
48	0102-9035	HOSE HP 3/8 x 400	1	
49	0080-0013	STREET ELBOW HP 3/8	1	
50	0080-0003	HOSE ELBOW 45° 3/8x3/8	1	
51	0100-3035	HOSE HP 1/8 x 350	2	
52	0073-1118	HOSE NIPPLE 1/8x1/8	2	
53	1603-0600	TILT CYLINDER	2	
54	1603-1208	BRANCH BLOCK	1	4005012A
55	0102-6349	HOSE HP 1/4 x 3490	1	
56	9252-0001	LIFT MOTOR 1.5kw 6341	1	
57	1603-1209	BLOCK BASE	1	EX-5686
58	CS-1045	HS-BOLT M10x45	2	
59	CS-1025	HS-BOLT M10x25	4	
60	1603-1215	VALVE KVSE-36B-3	1	

LIFT CYLINDER

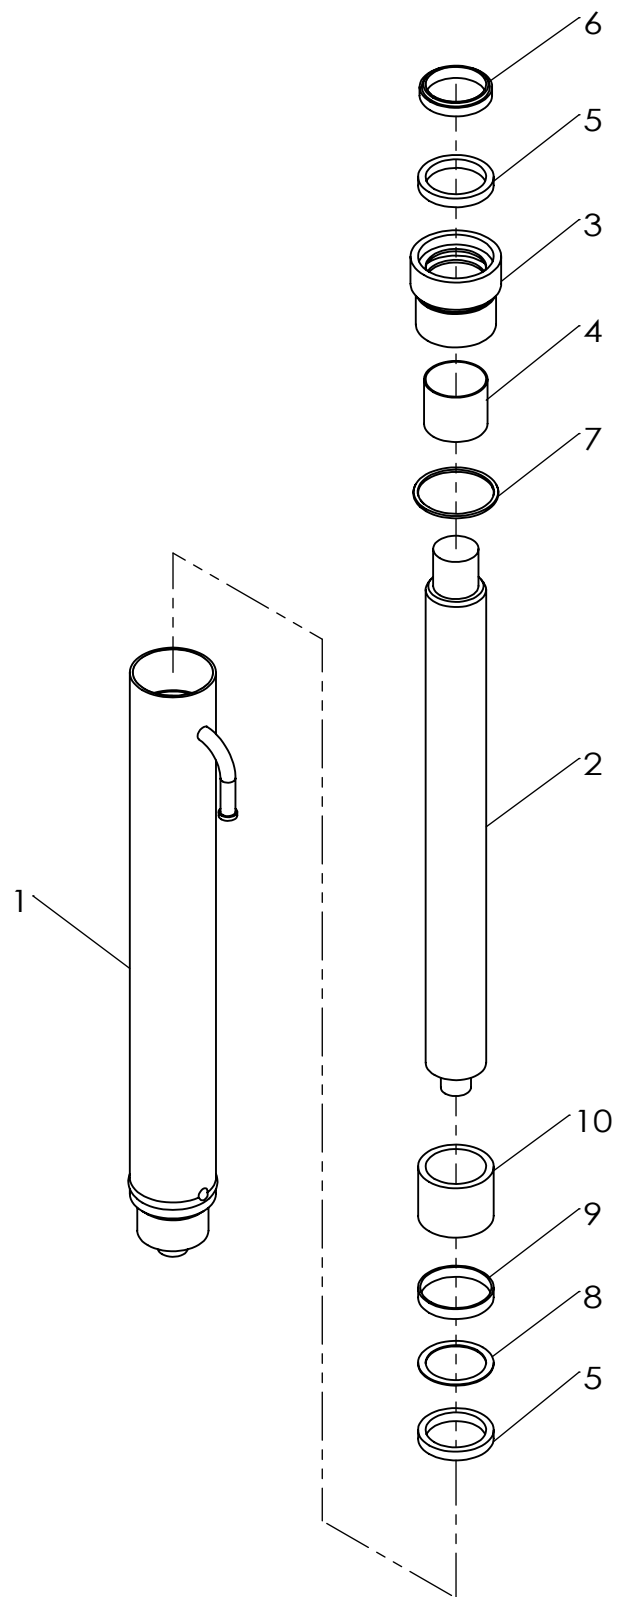


LIFT CYLINDER

RTP-632T1

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1501-0508	CYLINDER TUBE ASSY	1	
2	1501-0509	PISTON ROD ASSY	1	
3		CYLINDER HEAD	1	
4		BUSH	1	
5		U RING	2	
6		WIPER RING	1	
7		O RING JASO F404 2050	1	
8		BACK UP RING	1	
9	1500-0510	BUSH	1	
10	1500-0510	SPACER	1	
	1501-0507	LIFT CYLINDER ASSY	1	
	1500-0512	PACKING SET	1 SET	NO. 5, 6, 7, 8, 9
	1500-0510	CYLINDER HEAD SET	1 SET	NO. 3, 4

REACH CYLINDER

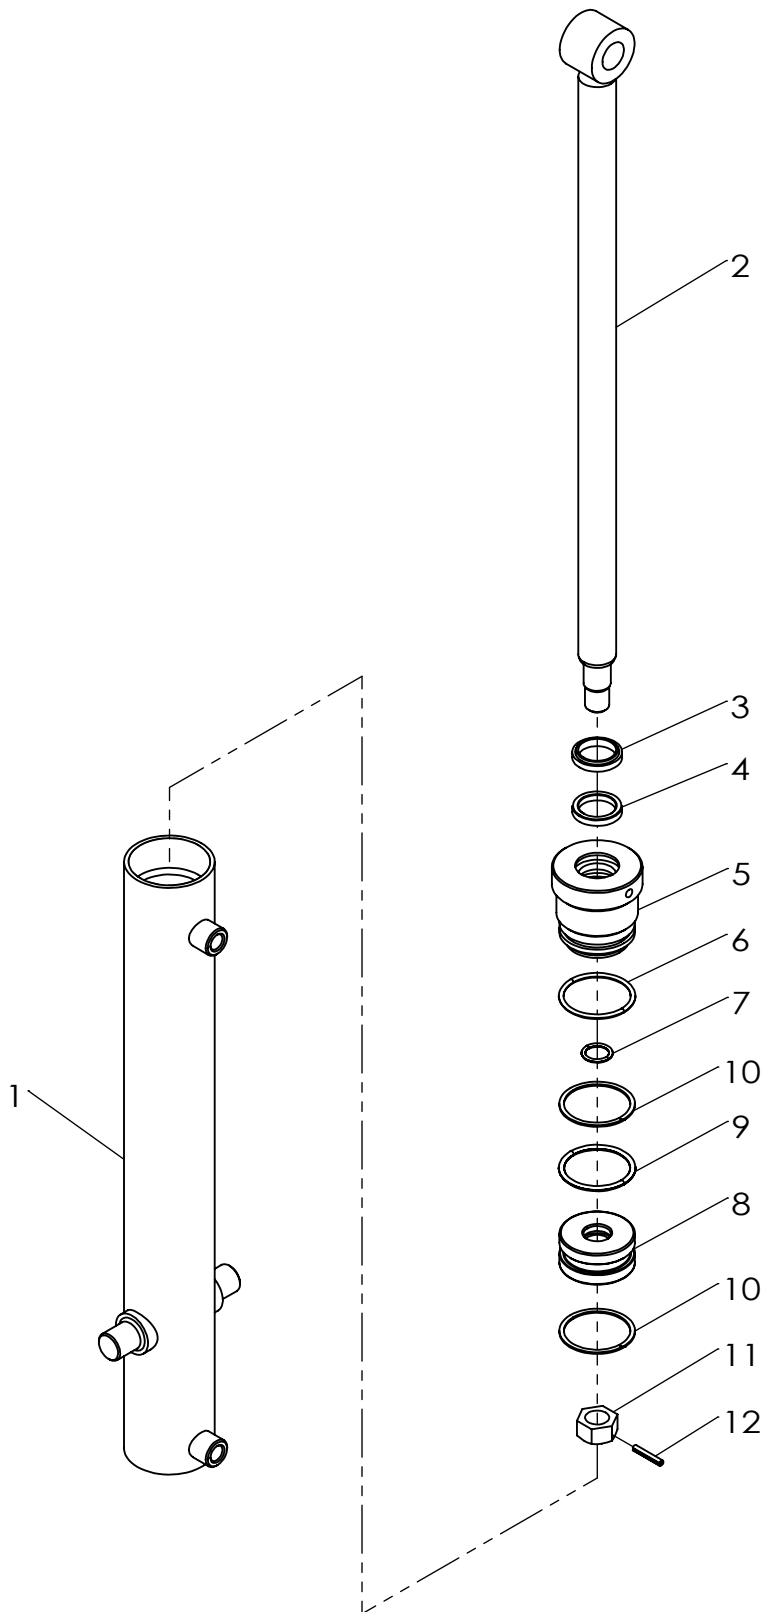


REACH CYLINDER

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1603-0701	CYLINDER TUBE	1	E-6373
2	1603-0702	PISTON ROD	1	E-6374-2
3		DUST SEAL SDR25	1	
4		U PACKING SKY25	1	
5	1603-0703	RAM NUT	1	EX-4582
6	ORG-45	O-RING G45	1	
7	ORP-16	O-RING P16	1	
8	1603-0704	PISTON	1	EX-4581
9	ORP-44	O-RING P44	1	
10		BACKUP RING P44	2	
11	HN-16	H-NUT M16	1	
12	RP-0425	ROLL PIN ϕ 4x25	1	
	1603-0700	REACH CYLINDER ASSY	1	
	1603-0706	PACKING SET	1 SET	NO. 3, 4, 6, 7, 9, 10

TILT CYLINDER

RTP-63

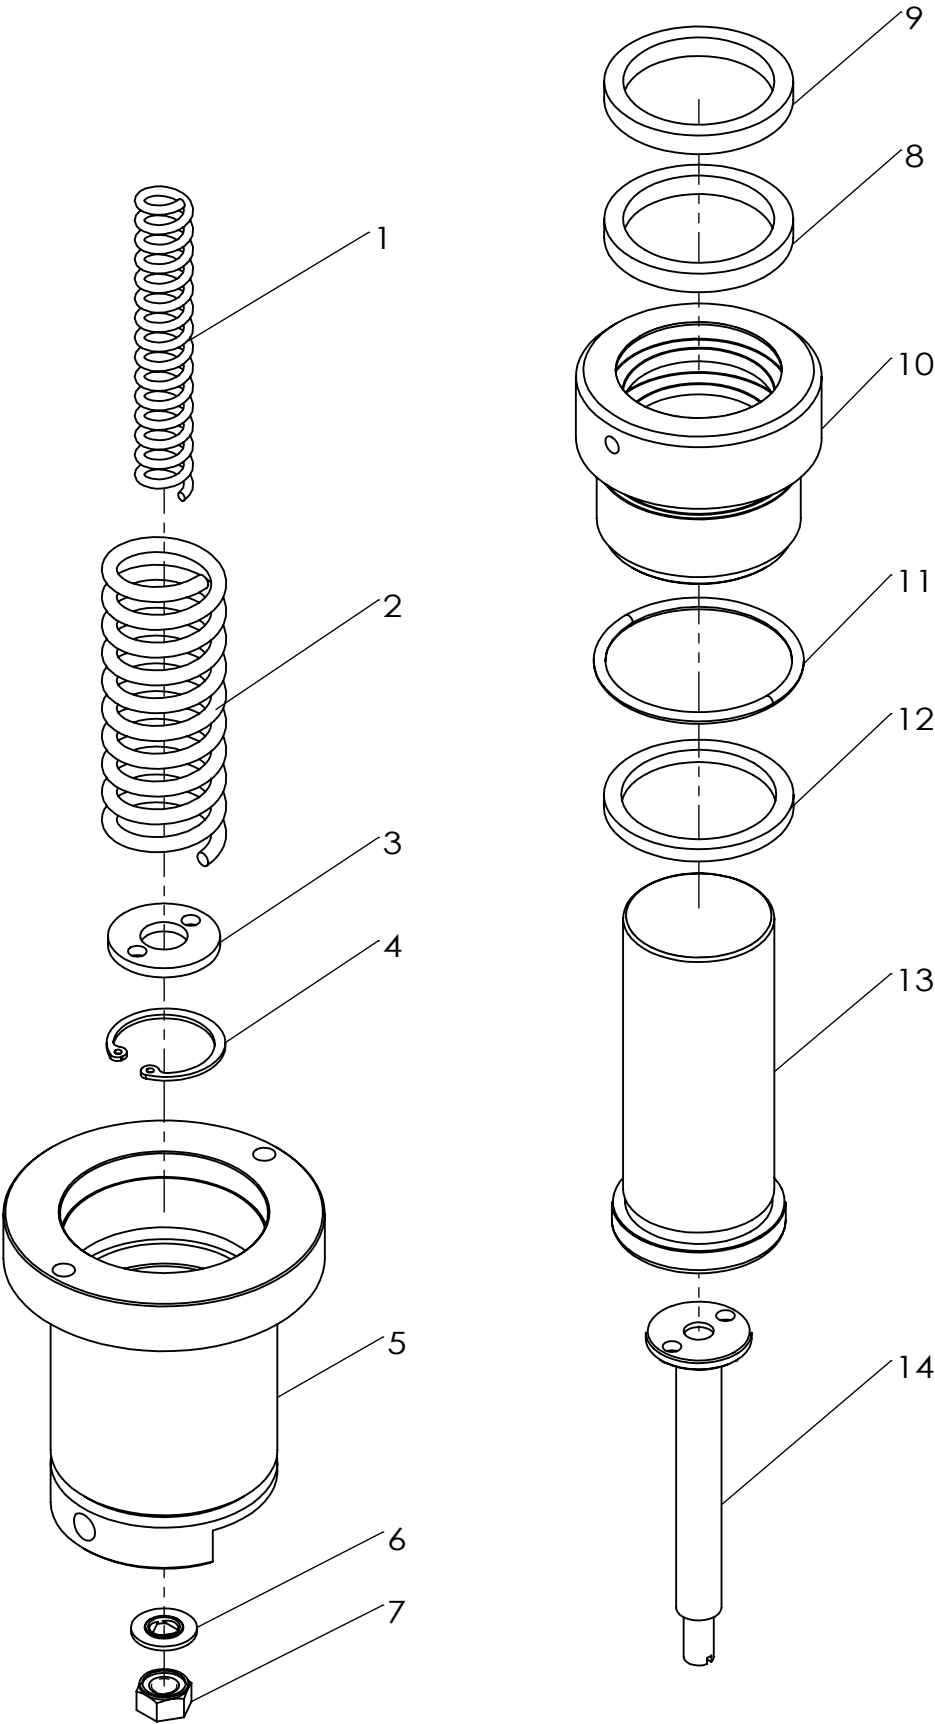


TILT CYLINDER

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1603-0601	SPRING B	2	EX-5495-2
2	1603-0602	SPRING A	2	EX-5495-1
3	1603-0603	WASHER	2	EX-5494
4	SRR-30	SNAP RING R-30	2	
5	1603-0604	CYLINDER TUBE	2	EX-4961B
6		SEAL WASHER_GSWM8	2	
7	UN-08	U-NUT M8	1	
8		DUST SEAL DH40	2	
9		U PACKING UH40	2	
10	1603-0605	ROD COVER	2	4004962C
11	ORG-50	O-RING G50	2	
12	1603-0606	STOPPER RING	2	EX-4964
13	1603-0607	RAM	2	EX-4963
14	1603-0608	PIN	2	4005493B
15	UNC-08	U-NUT M8 WITH CAP	1	
	1603-0600	TILT CYLINDER ASSY	2	
	1603-0610	PACKING SET	2 SET	NO. 6, 8, 9, 11

OIL TANK

RTP-63

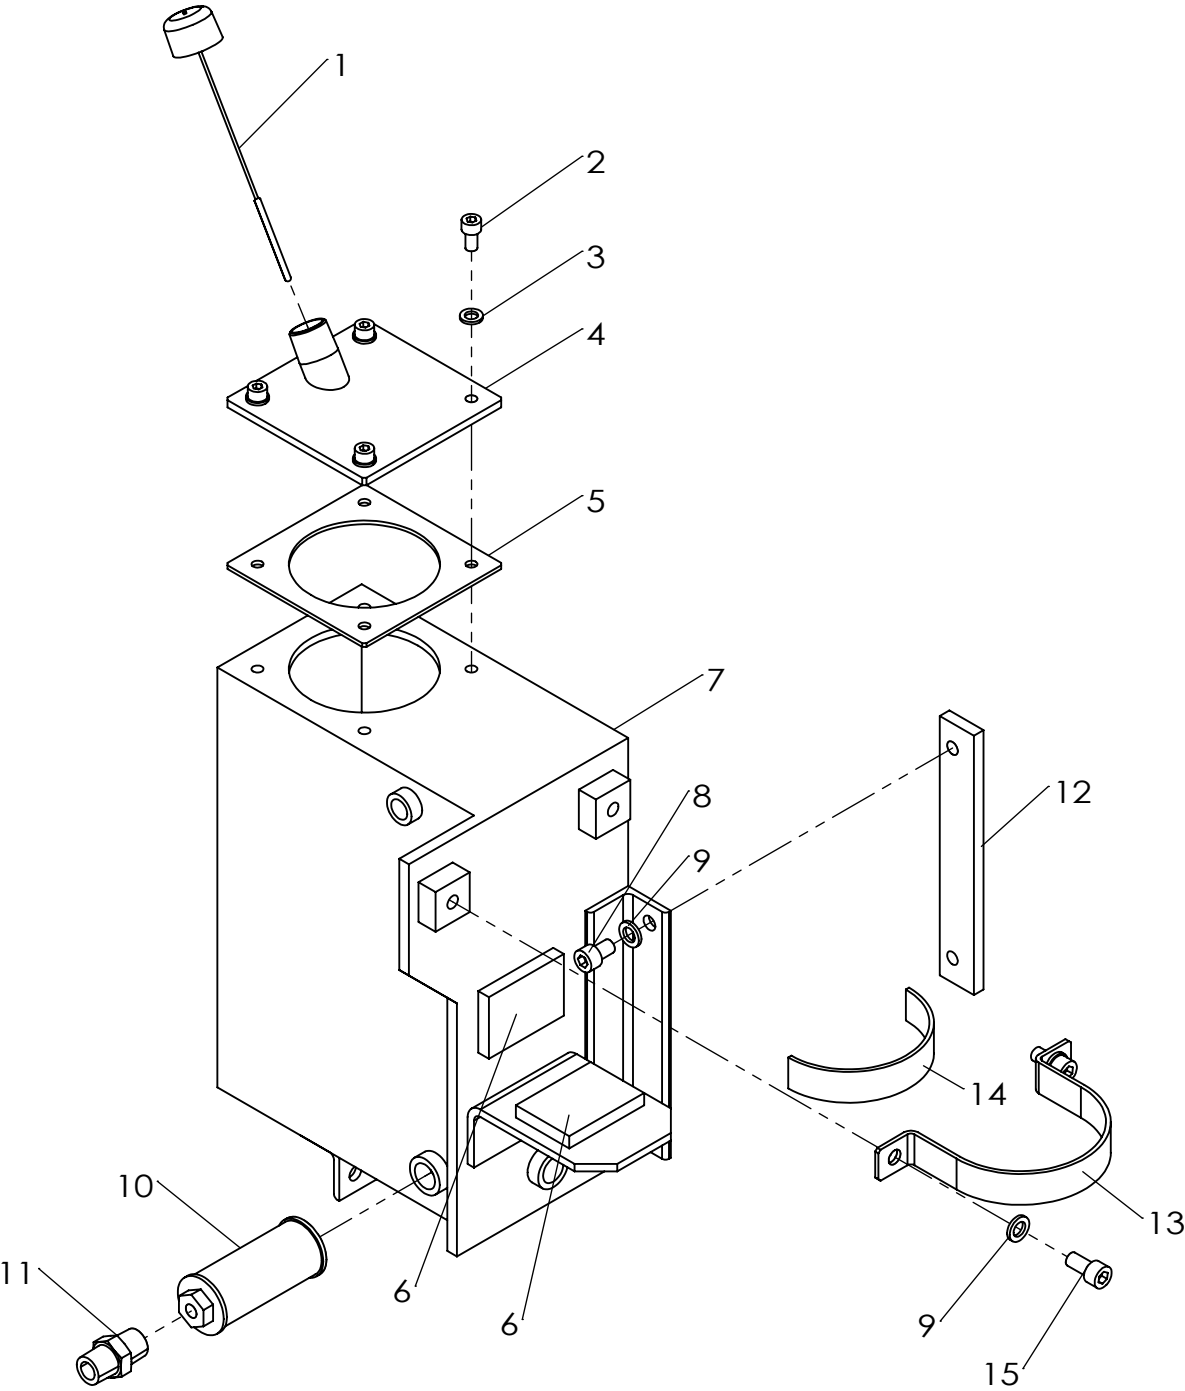


OIL TANK

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1603-1301	TANK CAP	1	4007377B
2	CS-0815	HS-BOLT M8x15	4	
3	SW-08	SW M8	4	
4	1603-1302	TANK COVER	1	E-7121B-2
5	1603-1303	PACKING	1	
6	1603-1304	RUBBER PLATE	2	
7	1603-1305	TANK	1	E-7121B-1
8	CS-1015	HS-BOLT M10x15	2	
9	SW-10	SW M10	4	
10	1405-1306	STRAINER	1	YMD-30410
11	0074-1212	NIPPLE 1/2x1/2	1	
12	1603-1307	TANK BASE	1	E-7121B-3
13	1603-1308	MOTOR BAND	1	E-0907-2
14	1603-1309	CUSHION	1	
15	0002-1020	HS-BOLT M10x20	2	

ELECTRICAL PARTS 1

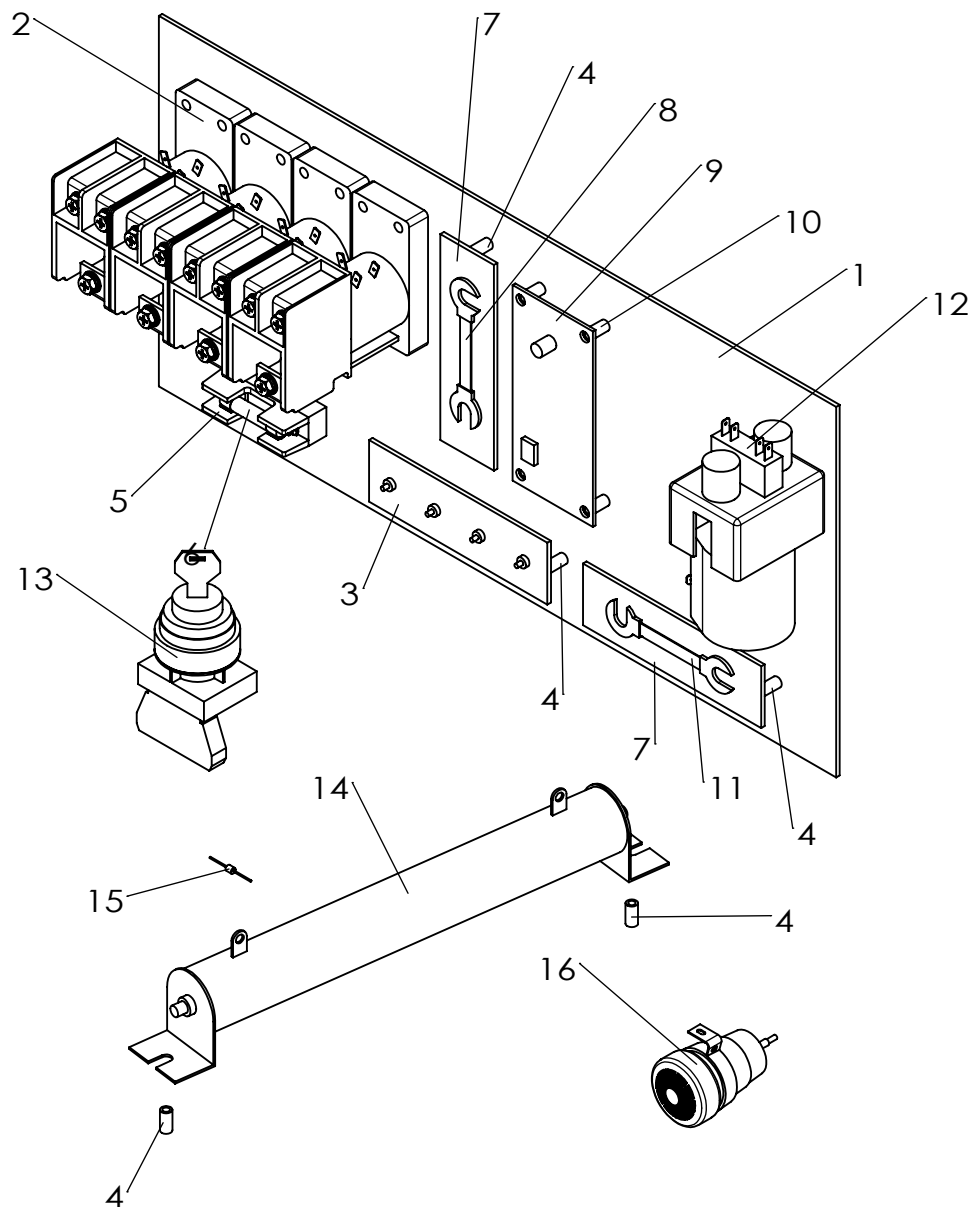


ELECTRICAL PARTS 1

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1663-1400	CONTROL PANEL ASSY	1	
2	9015-0001	MAGNET SWITCH	4	
3	9900-0201	TERMINAL BOARD	1	
4	9902-0007	SPACER	8	
5	9399-0001	FUSE HOLDER	1	
6	9302-0005	GLASS TUBE FUSE	1	
7	9398-0001	FUSE BOARD	2	
8	9301-0060	LINK FUSE	1	
9	9801-0002	TIMER BOARD	1	
10	9902-0004	SPACER	4	
11	9301-0100	LINK FUSE	1	
12	9016-0001	MAGNET SWITCH	1	
13	9702-0001	KEY SWITCH	1	
14	9511-0003	COATING RESISTANCE	1	
15	9850-0003	DIODE	5	
16	9905-0003	BACK BUZZER	1	

ELECTRICAL PARTS 2

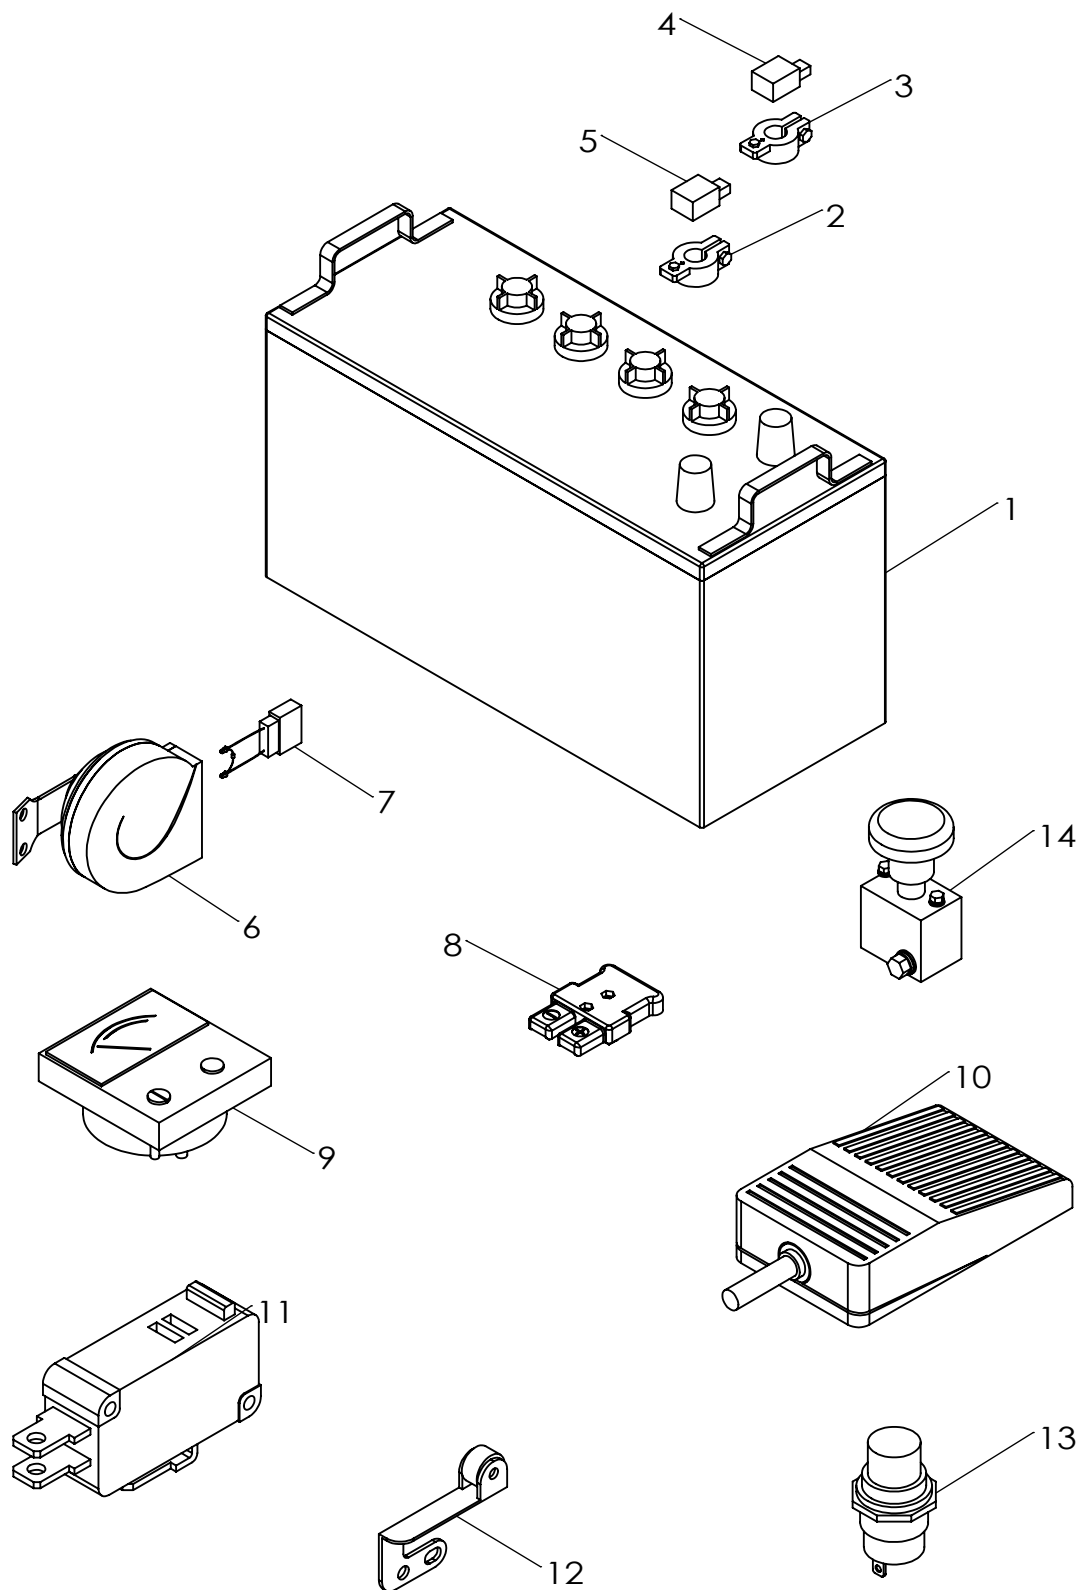


ELECTRICAL PARTS 2

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	9451-0003	BATTERY EB-120	2	
2	9499-0001	BATTERY TERMINAL (+)	2	
3	9499-0002	BATTERY TERMINAL (-)	2	
4	9499-0003	BATTERY TERMINAL COVER N1 RED	2	
5	9499-0004	BATTERY TERMINAL COVER N2 BLACK	2	
6	9905-0001	HON SPH-24V	1	
7	9604-0001	HON HARNESS	1	
8	9403-0010	DC PLUG	5	
9	9498-0001	ELECTRICAL DISCHARGE METER 33V	1	
10	9705-0004	FOOT SWITCH OFL-V-M4	1	
11	9701-0009	MICRO SWITCH V-10-1A5	3	
12	9701-0010	MICRO SWITCH ACTUATOR VAL- 2	3	
13	9702-0006	PUSH BUTTON SWITCH SB-4011N/0	1	
14	9705-0011	EMERGENCY STOP SWITCH ED125-1	1	

ELECTRIC PARTS 3

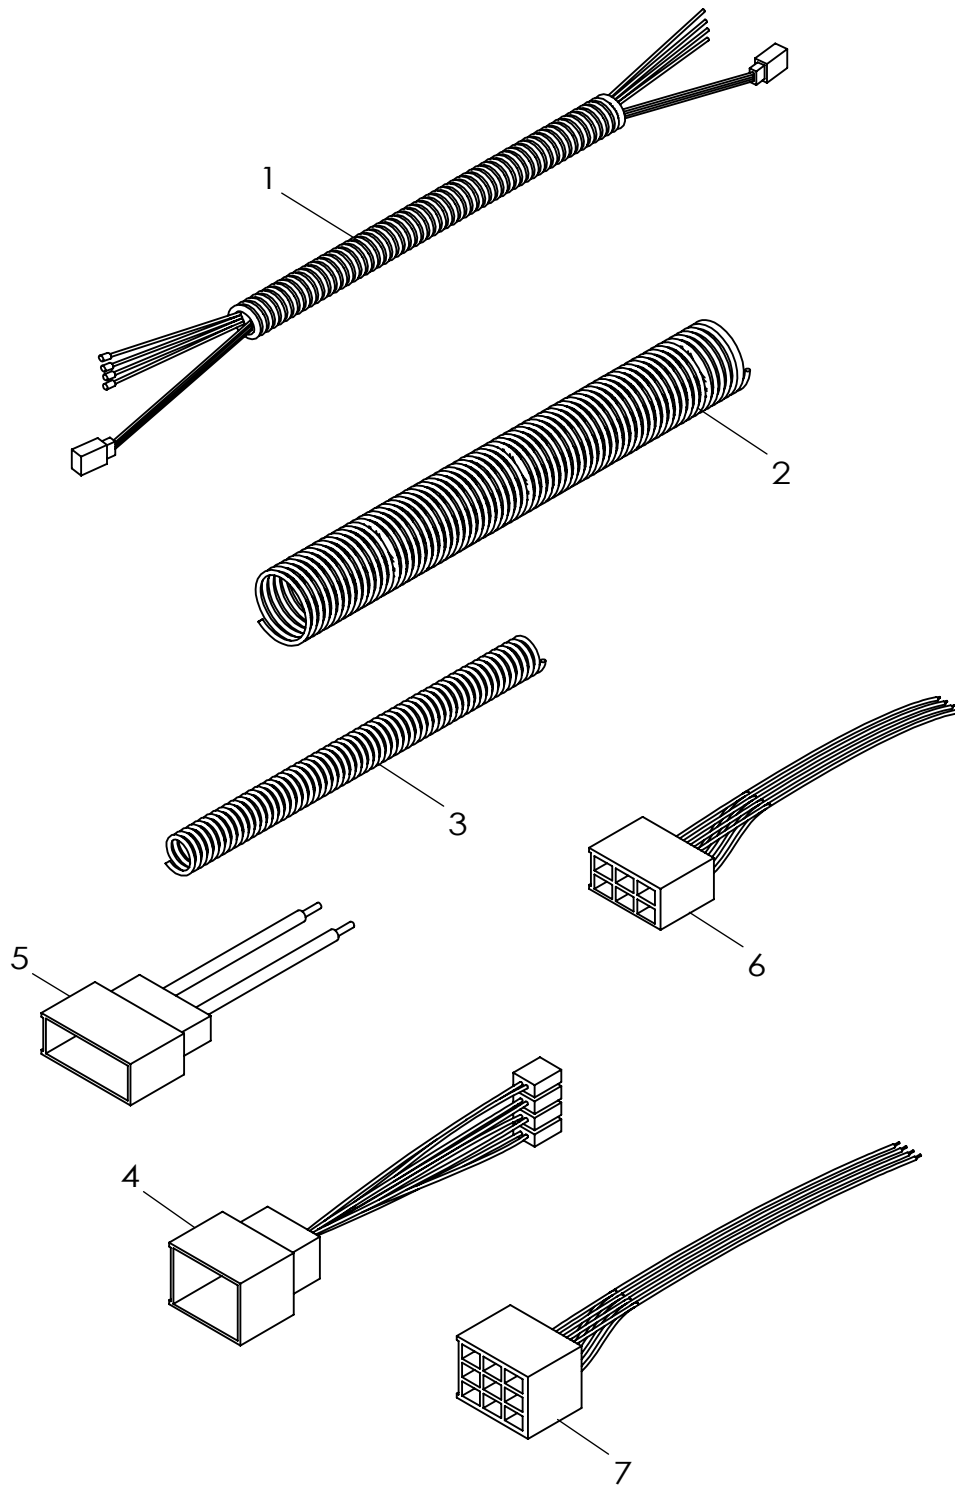


ELECTRIC PARTS 3

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	9601-0015	MAIN HARNESS	1	
2	9699-0001	HARNESS SPRING	1	
3	9699-0003	HARNESS SPRING	1	
4	9601-0009	HARNESS	1	
5	9601-0006	HARNESS	1	
6	9601-0007	HARNESS	1	
7	9601-0008	HARNESS	1	

CONTROLLER

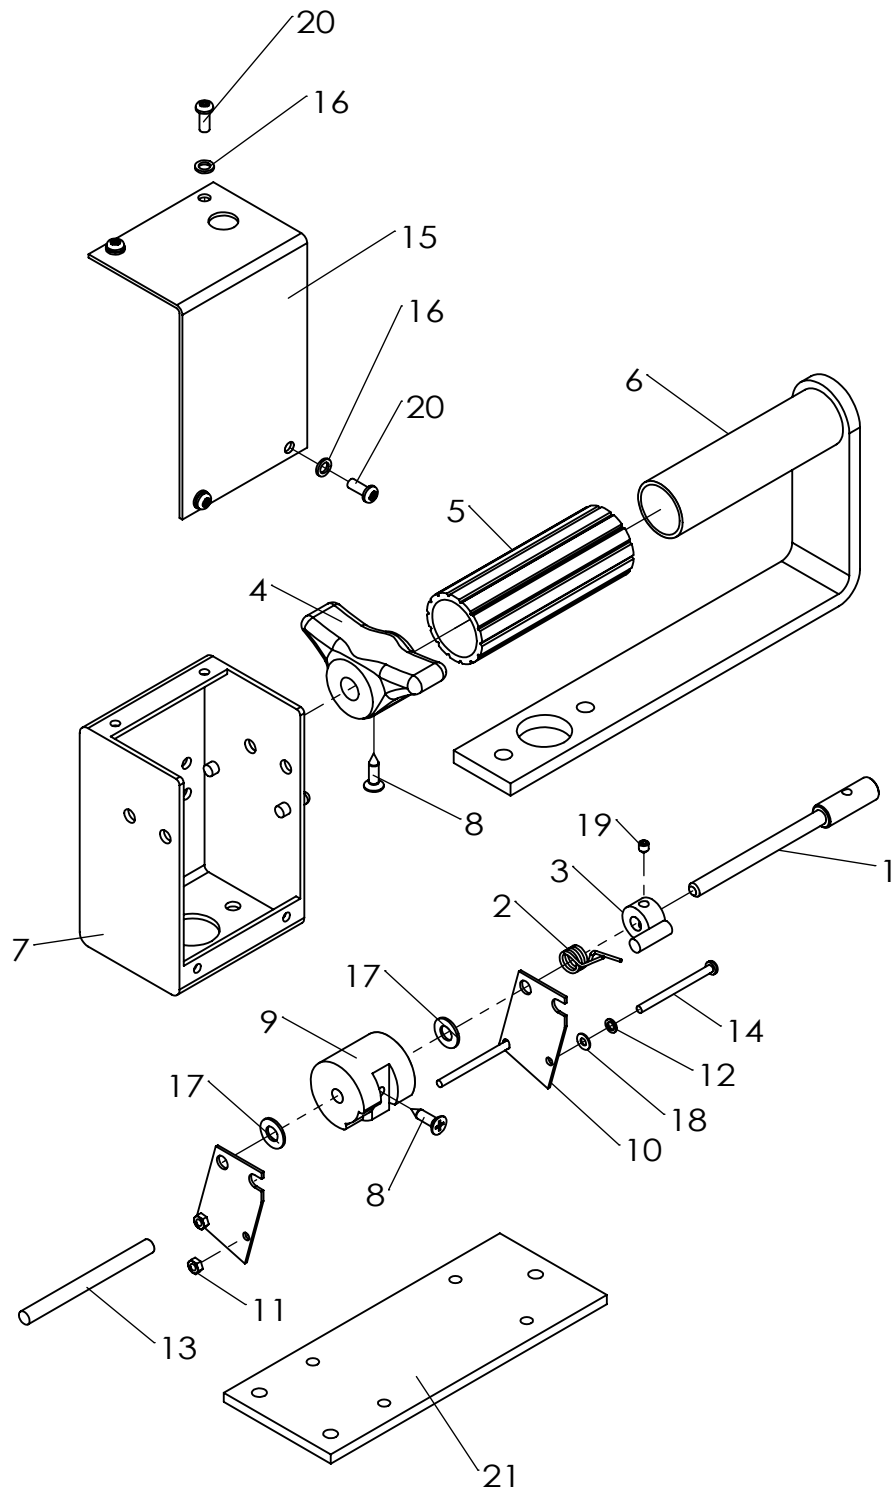


CONTROLLER

RTP-63

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1100-1606	RETURN GUIDE	1	4010198A
2	1100-1607	SPRING	1	4006550E
3		SPACER B	1	4006567C
4	1603-1403	KNOB	1	EX-5689
5	0061-0002	RUBBER GRIP L85	1	4006556A
6	1603-1405	GRIP	1	3003131
7	1603-1406	CONTROL BOX	1	3003129A
8	HS-0416	TAPPING SCREW M4x16	2	
9	1100-1603	CAM	1	4008505A
10	1100-1608	SWITCH BASE	2	4008464B
11	HN-03	H-NUT M3	2	
12	SW-03	SW M3	2	
13	1603-1409	CONTROLLER SHAFT	1	3003129A
14	0001-0340	P-BOLT (+) M3x40	2	
15	1100-1602	COVER	1	3003130
16	SW-04	SW M4	4	
17	PW-06	PW M6	2	
18	PW-03	PW M3	2	
19	SS-0405C	S-BOLT (CONE) M4x5	1	
20	MS-0410N	P-BOLT M4x10	4	
21	1603-1413	FOOTSWITCH BASE	1	EX-5738

MAGNET SWITCH 1

CM4-TX

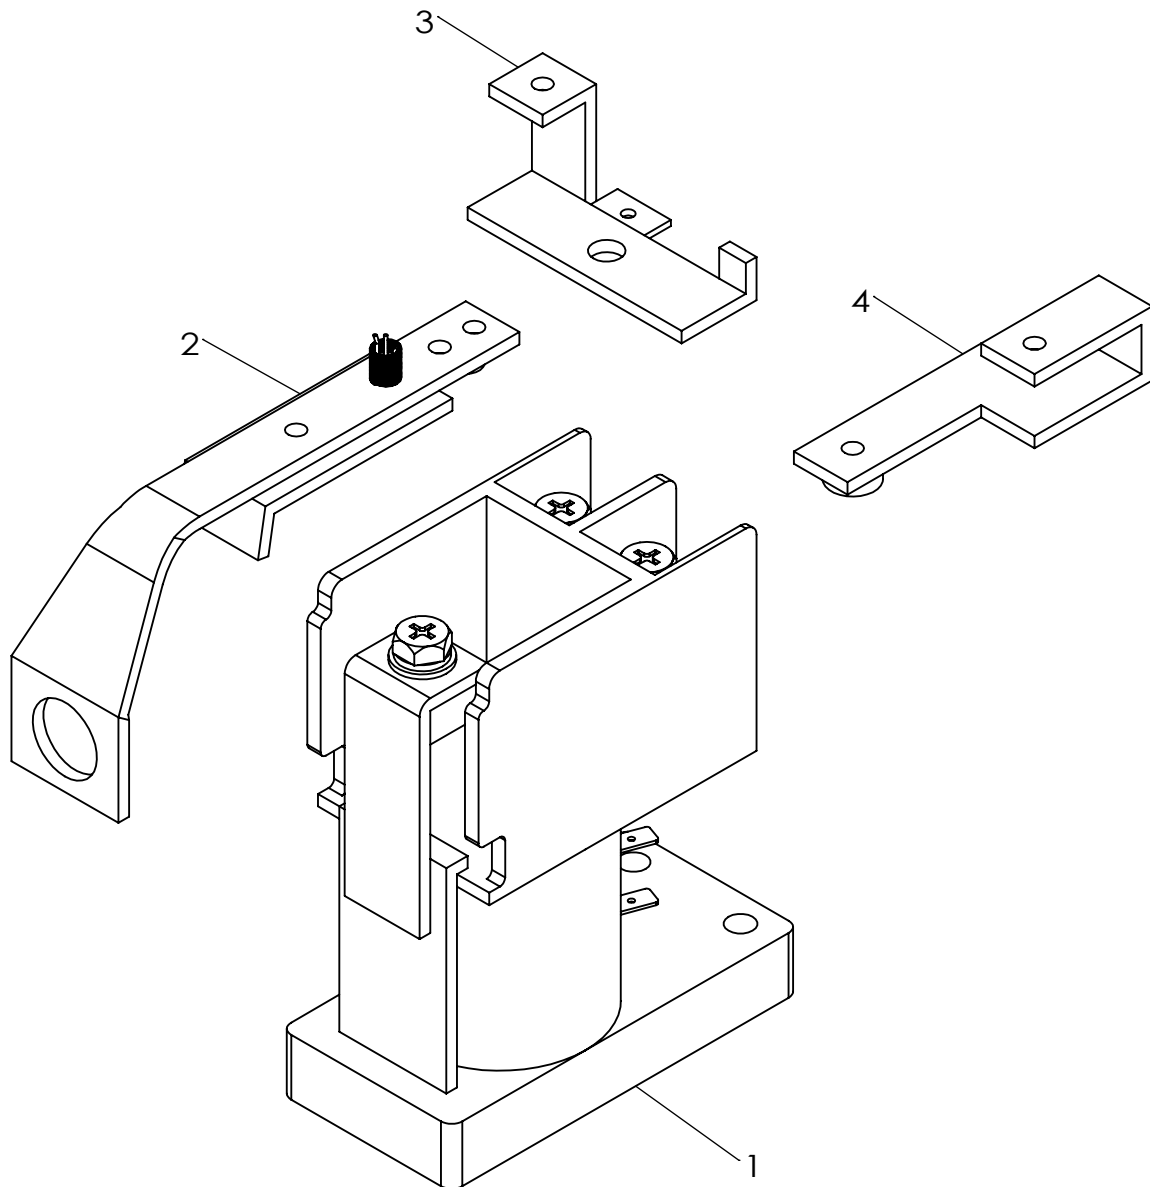


MAGNET SWITCH 1

CM4-TX

NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9015-0002	MAGNET COIL BASE	1	
2	9015-0003	CONTACT POINT MOVABLE	1	
3	9015-0004	CONTACT POINT FIXED A	1	
4	9015-0005	CONTACT POINT FIXED B	1	
	9015-0001	MAGNET SWITCH ASSY	1	

MAGNET SWITCH 2

SW80

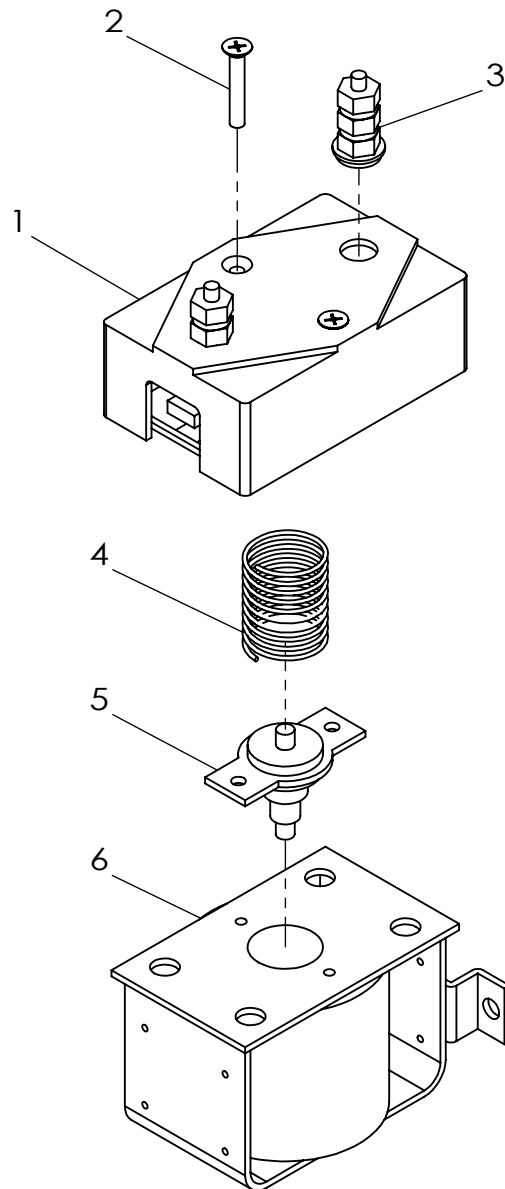


MAGNET SWITCH 2

SW80

NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9016-0002	CONTACT COVER	1	
2	MS-0425S	F-BOLT M4x25	2	
3	9016-0003	CONTACT POINT FIXED	2	
4	9016-0004	SPRING	1	
5	9016-0005	CONTACT POINT MOVABLE	1	
6	9016-0006	MAGNET COIL BASE	1	
	9016-0001	MAGNET SWITCH ASSY	1	

KM-2476

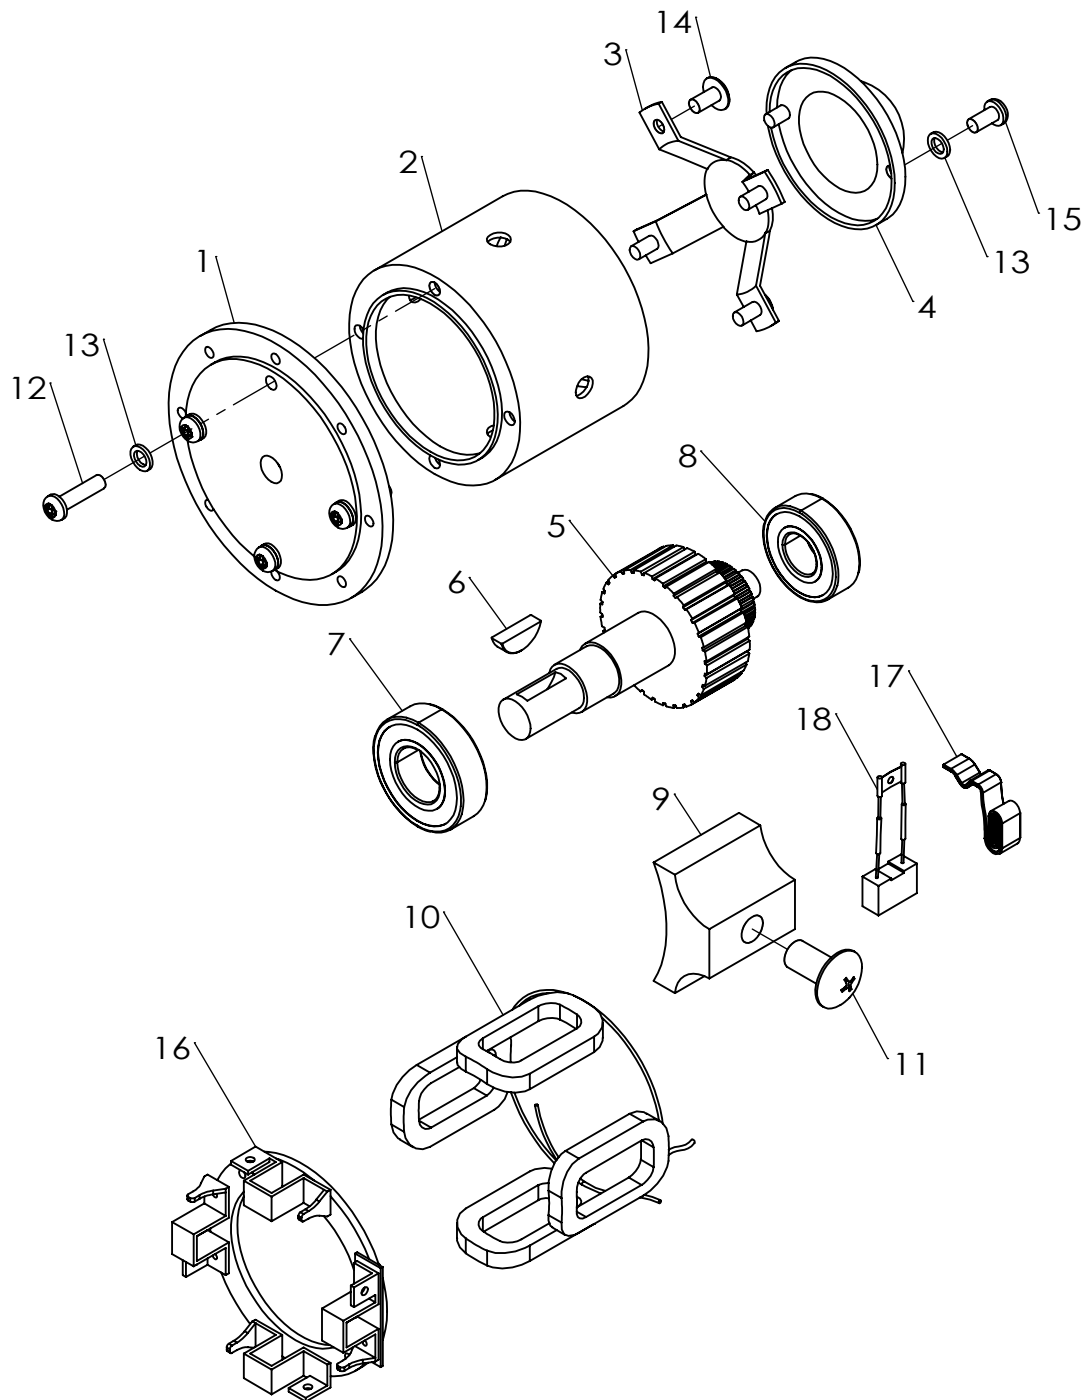

DRIVE MOTOR

KM-2475


NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9203-0002	END COVER A	1	
2	9204-0003	YOKE	1	
3	9204-0004	END COVER B	1	
4	9204-0005	END COVER C	1	
5	9204-0006	ARMATURE COIL	1	
6	HK-0519	HALF KEY 5x19	1	
7	BB-6004ZZ	BALL BEARING 6004ZZ	4	
8	BB-6202ZZ	BALL BEARING 6202ZZ	1	
9	9204-0007	FIELD CORE	4	
10	9204-0012	FIELD COIL	1 SET	
11	MS-1020T	P+BOLT M10x20	4	
12	MS-0520N	P-BOLT M5x20	4	
13	SW-05	SW M5	6	
14	MS-0510T	P+BOLT M5x10	4	
15	MS-0510N	P-BOLT M5x10	2	
16	9204-0013	BRUSH HOLDER	1 SET	
17	9204-0010	SPRING	4	
18	9205-0011	CARBON BRUSH	4	
	9204-0001	DRIVE MOTOR ASSY	1	KM-2475

KM-2475 モーター使用機種

NHP-103
 THP-304, THP-153, THP-103
 DHP-53
 LHP-203, LHP-173, LHP-153
 OHP-203, OHP-153, OHP-103
 FHP-53
 RHP-93
 RTP-63, RTP-53A
 SHP-103, SHP-73

OIL MOTOR

24v-1.5kw 6341

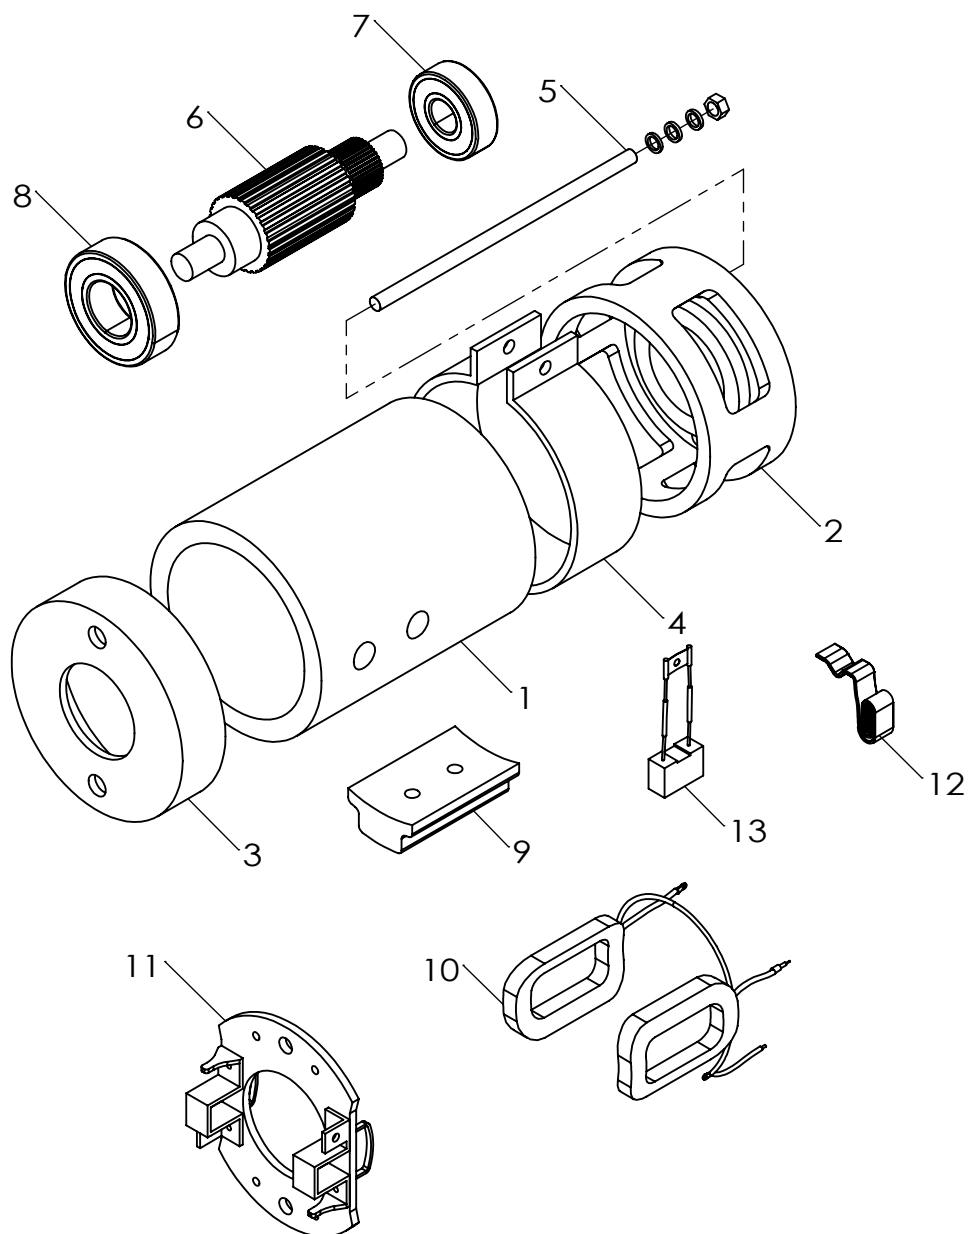


OIL MOTOR

24v-1.5kw 6341

NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9253-0002	YOKE	1	
2	9253-0003	REAR COVER	1	
3	9253-0004	FRONT COVER	1	
4	9253-0005	COMMUTATOR COVER	1	
5	9253-0006	BOLT SET	2 SET	
6	9253-0007	ARMATURE COIL	1	
7	BB-6201ZZ	BALL BEARING 6201ZZ	1	
8	BB-6004ZZ	BALL BEARING 6004ZZ	1	
9	9253-0008	FIELD CORE	2	
10	9253-0009	FIELD COIL	1 SET	
11	9253-0010	BRUSH HOLDER	1 SET	
12	9253-0011	SPIRAL SPRING	2	
13	9253-0012	CARBON BRUSH	2	
	9253-0001	OIL MOTOR ASSY	1	24V-1.5kw 6341

CHARGER

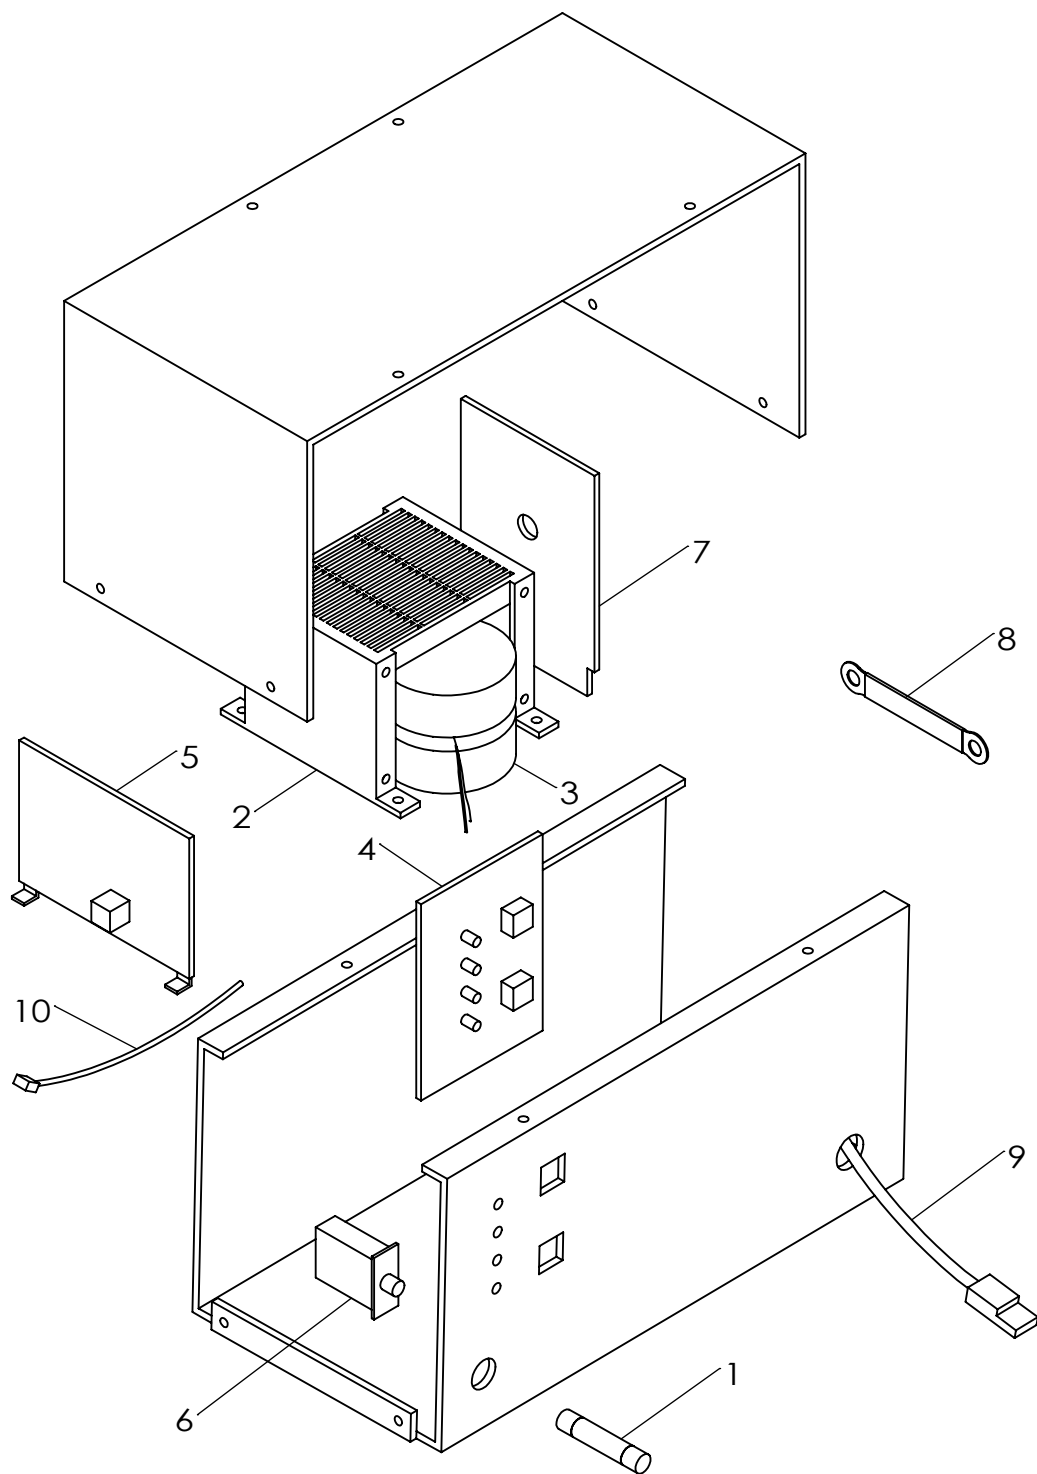

CHARGER

NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9119-0001	FUSE	1	
2	9119-0002	TRANSFORMER	1	
3	9118-0003	THERMAL PROTECTOR	1	
4	9118-0004	PRINT BOARD	1	
5	9118-0005	PRINT BOARD	1	
6	9118-0006	PUSH BUTTON SWITCH	1	
7	9118-0007	SILICON STACK	1	
8	9118-0008	SHORT CIRCUIT PTOTECTION	1	
9	9118-0009	BATTERY CODE	1	
10	9118-0010	INPUT CODE	1	
	9119-0000	CHARGER ASSY	1	KS-2420D