
8S, 8W, 1S, 1W

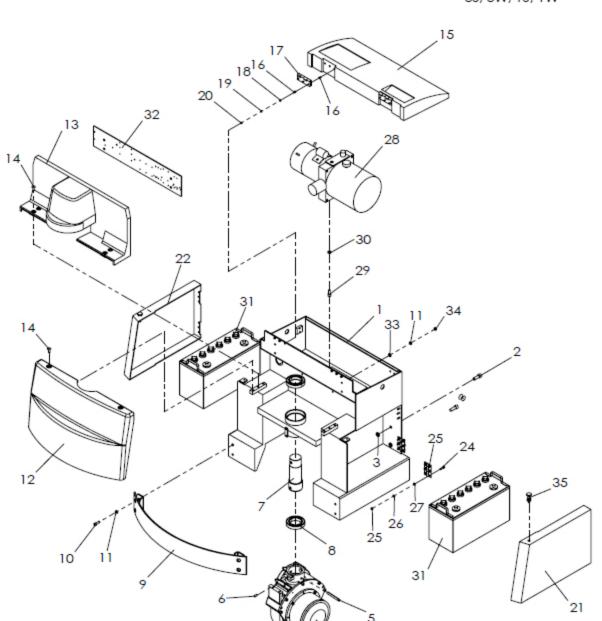

FRAME

	TS NO	PARTS		\perp	Ø, TA	DRAWING N
1426	-0101	FRAME ASSY_8S,	8W, 1S, 1	W	1	1426-0101E
CS-	1235	HS-BOLT M12x35			10	
SW	- 12	SW M12			10	
1603	-0800	DRIVE ASSY			1	
RP-	1090	SPRING PIN 10x	90		1	
SS-	0816	S-BOLT M8x16			1	
2101	-1601	HANDLE SHAFT			1	2012465
B-60	012LLU	BALL BEARING	6012LLU		2	
2101	-0109	DRIVE GUARD			1	1420-0106B
0002	-0825	HS-BOLT M8x25			4	
SW	-08	SW M8			8	
1219	-0105	DRIVE COVER			1	2011914
1219	-0104	CYLINDER COVER			1	2011913D
NSB-	0820T	P+BOLT M8x20 COATING	BLACK		6	
1219	-0103	BATTERY COVER			1	2011912
MS-(0512M	F+B0LT M5x12			12	
1219	-0108	HINGE_B-78-A-1	5		2	
PW	-05	PW M5			6	
SW	-05	SW M5			6	
HN	I - 05	H-NUT M5			6	
1420	-0104	SIDE GUARD COV	ER RIGHT		1	1420-0104A-
1420	-0105	SIDE GUARD COV	ER LEFT		1	1420-0104A-
1420	-0108	HINGE_TH-TM NO	89		4	
CS-	0620	HS-BOLT M6x20			24	
HN	I-06	H-NUT M6			24	
SW	-06	SW M6			24	
PW	-06	PW M6			24	
9278	-0000	POWER PACKAGE	ASSY		1	
CS-	0925	HS-BOLT M9x25L	(3/8"x25)		2	
SW	-10	SW M10			2	

PARTS NAME

PARTS NO

NO.


FRAME

DRAWING NO O, LA

8S, 8W, 1S, 1W


31	9451-0002	BATTERY_EB-100	2	
32	2101-0112	CONTROL PANEL	1	3003287
33	PW-08	PW M8	4	
34	HN-08	H-NUT M8	4	
35	1604-0121	INDEX PLUNGER_IP-I-12	2	
35	1004-0121	INDEX PLUNGER_IP-1-12	2	

88, 18

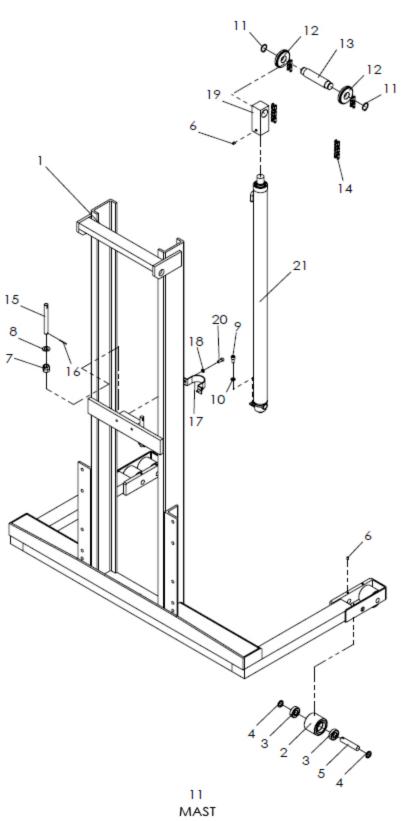

8S, 1S


NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1426-0201	OUTER MAST	1	1426-0201B
2	1103-1000	LOAD WHEEL_ \$\phi\$ 78x70	4	EX-5151
3	BB-6204ZZ	BALL BEARING 6204ZZ	8	
4	1420-1001	WHEEL COLLAR	8	EX-5693A
5	1420-0205	CHAIN WHEEL PIN	4	1420-0202B
6	SS-0810	S-BOLT M8x10	5	
7	HN-16	H-NUT M16	4	
8	PW-16	PW M16	2	
9	CS-1020	HS-BOLT M10x20	1	
10	SW-10	SW M10	1	
11	SRS-30	SNAP RING S-30	2	
12	1512-0400	CHAIN WHEEL	2	4010139
13	1406-0403	CHAIN WHEEL PIN	1	E-2354-2
14	93001-00001	CHAIN #50 1.60M	2	
15	1500-1511	CHAIN END BOLT	2	EX-1705A
16	SP-0330	SPLIT PIN φ3x30	2	
17	2103-0501	CYLINDER BRACKET	1	4010220
18	SW-08	SW M8	2	
19	2103-0202	CHAIN WHEEL BRACKET	1	2012469B
20	CS-0820	HS-BOLT M8x20	2	
21		LIFT CYLINDER ASSY	1	

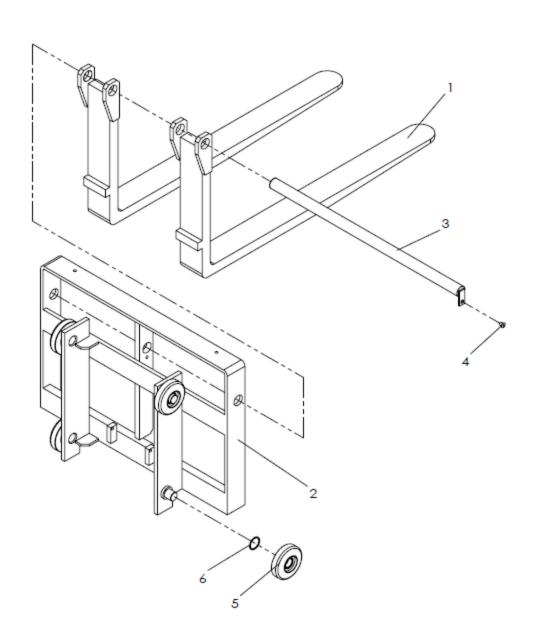

FORK

8S, 1S

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1426-0301	FORK	2	3003080B
2	2103-0301	CARRIAGE	1	3003094G
3	2101-0303	FORK SHARFT	1	3003081C
4	MS-0810T	P+B0LT M8x10	1	
5	0SA02-4400	MAST ROLLER 25BFM9501QAV2M	4	
6	1500-1514	MAST ROLLER SHIM_φ37xφ31xt0.8	4	

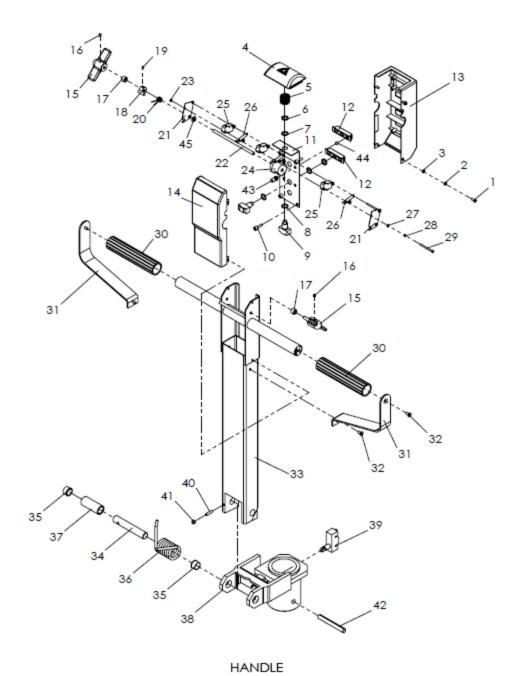


NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING I
1	MS-0410N	P-BOLT M4x10	7	
2	SW-04	SW M4	9	
3	PW-04	PW M4	4	
4	1208-1604	EMERGENCY SWITCH	1	F8049-F903
5	1208-1618	SPRING	1	4006089C
6	0019-0012A	ROUND NUT_MICROSWITCH ONLY	2	
7	0023-0012	INTERNAL TOOTH WASHER_MICROSWITCH ONLY	2	
8	0019-0012B	NUT_MICROSWITCH ONLY	2	
9	9705-0003	MICROSWITCH_SB-221	2	
10	CS-0416	HS-BOLT M4x16	4	
11	2101-1605	SWITCH BASE	1	4010194A
12	1208-1603	SWITCH COVER	2	4008506A
13	1216-1601	HANDLE COVER-A	1	2009767C
14	1208-1602	HANDLE COVER-B	1	2010880A
15	1604-1629	FINGER	2	4008069B
16	SS-0505	S-BOLT M5x5	2	
17	1208-1402	CAM SHAFT SPACER	2	4008504
18	1604-1631	SAPCER B	1	4006567C
19	SS-0405	S-BOLT M4x5	2	
20	1604-1932	SET SPRING	1	4006550E
21	1208-1615	SWITCH BRACKET	2	4008464B
22	1208-1401	CAM SHAFT	1	F8049-F930
23	HN-03	H-NUT M3	2	
24	1208-1400	CONTROLLER CAM	1	4008505
25	9701-0009	MICROSWITCH_V-10-1A5	3	
26	9701-0010	ACTUATOR_VAL-2	3	
27	PW-03	PW M3	2	
28	SW-03	SW M3	2	
29	MS-0340T	P-B0LT(+) M3x40	2	
30	0061-0002	GRIP	2	4006556A

HANDLE

24

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
31	1208-1607	GRIP GUARD	2	4006552A
32	MS-0510S	F-B0LT M5x10	4	
33	2101-1602	HANDLE POST	1	2012466B
34	1219-1601	HANDLE BRACKET PIN	1	4009727
35	0110-0032	BUSH BM1615F24FB (CUT)	2	
36	1208-1610	RETURN SPRING	1	4008184A
37	1208-1611	SPRING COLLAR	1	4004956A
38	2101-1603	HANDLE BRACKET	1	2102467A
39	9701-0006	MICROSWITCH_Z-15GQ22-B	1	
40	SS-0520	S-BOLT M5x20	1	
41	HN-05	H-NUT M5	1	
42	RP-1080	ROLL PIN Ø 10x80	1	
43	9705-0018	PUSH BUTTON SWITCH_MB-2521	2	
44	2101-1604	SWITCH SPACER	2	4010191
45	PW-06	PW M6	1	

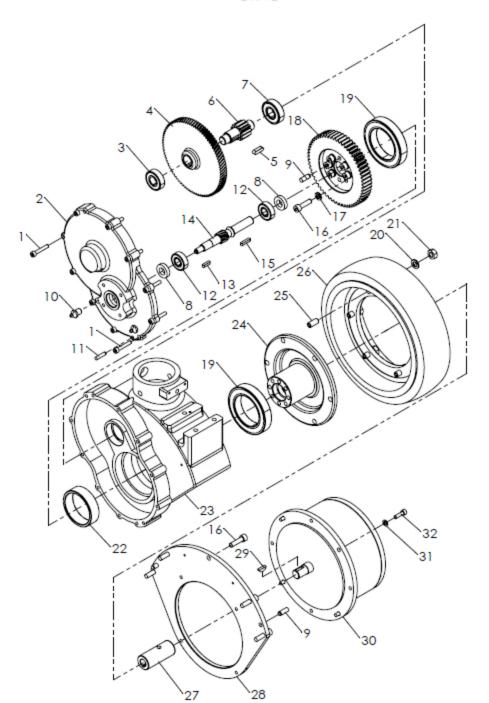


		DRIVE		
NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	CS-0635	HS-BOLT M6x35	10	
2	1603-0801	COVER	1	3002866
3	BB-6203ZZ	BALL BEARING 6203ZZ	1	
4	1603-0802	HELICAL GEAR	1	4010150
5	BK-0724	KEY 7x24	1	
6	1603-0803	SPUR PINION	1	4010151
7	BB-6204ZZ	BALL BEARING 6204ZZ	1	
8	0067-0010	OIL SEAL	2	AC15287
9	PP-0822	PARALLEL PIN 8x22	4	
10	0075-1401	GREASE NIPPLE 1/4	2	
11	PP-0625	PARALLEL PIN 6x25	2	
12	BB-6202ZZ	BALL BEARING 6202ZZ	2	
13	BK-0520	KEY 5x20	1	
14	1603-0804	INPUT SHAFT	1	4010149
15	BK-0525	KEY 5x25	1	
16	CS-0830	HS-BOLT M8x30	11	
17	SW-08	SW M8	6	
18	1603-0805	SPUR GEAR	1	4010152
19	BB-6013DDU	BALL BEARING 6013DDU	2	
20	SW-10	SW M10	6	
21	HN-10	H-NUT M10	6	
22	1603-0806	COLLAR	1	4010153
23	1603-0807	CASING	1	2012416A
24	1603-0808	TIRE BOSS	1	3002871
25	SS-1022	S-BOLT M10x22	6	
26	1700-0801	TIRE 285x80	1	2011858B
27	1100-0805	COUPLING	1	EX-3769
28	1603-0810	MOTOR MOUNTING PLATE	1	3002870
29	HK-0519	HALF KEY 5x19	1	
30	9204-0001	MOTOR ASSEMBLY	1	3002878

27 DI


DRIVE

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
31	SW-06	SW M6	4	
32	CS-0620	HS-BOLT M6x20	4	
33	1603-0800	DRIVE ASSY	1	

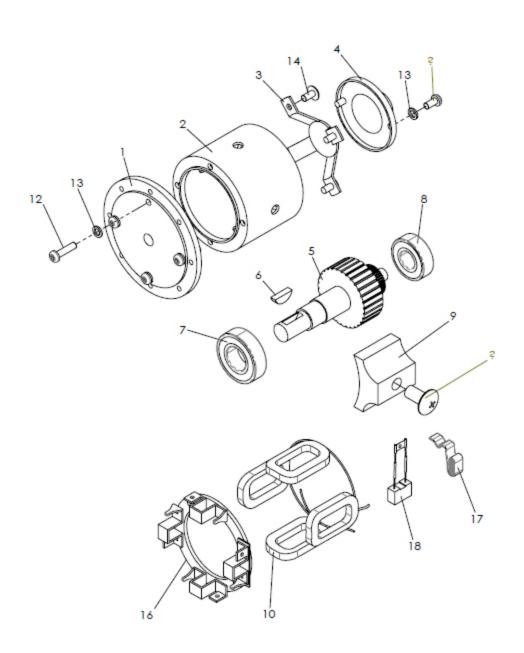


DRIVE MOTOR

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	9203-0002	END COVER A	1	
2	9204-0003	YOKE	1	
3	9204-0004	END COVER B	1	
4	9204-0005	END COVER C	1	
5	9204-0006	ARMATURE COIL	1	
6	HK-0519	HALF KEY 5x19	1	
7	BB-6004ZZ	BALL BEARING 6004ZZ	1	
8	BB-6202ZZ	BALL BEARING 6202ZZ	1	
9	9204-0007	FIELD CORE	4	
10	9204-0012	FIELD COIL	4	
11	MS-1020T	P+B0LT M10x20	4	
12	MS-0520N	P-BOLT M5x20	4	
13	SW-05	SW M5	8	
14	MS-0510T	P+B0LT M5x10	4	
15	MS-0510N	P-B0LT M5x10	2	
16	9204-0013	BRUSH HOLDER	4	
17	9204-0010	SPRING	4	
18	9205-0011	CARBON BRUSH	4	
19	9204-0001	MORTOR ASSY_KM-2475A	1	

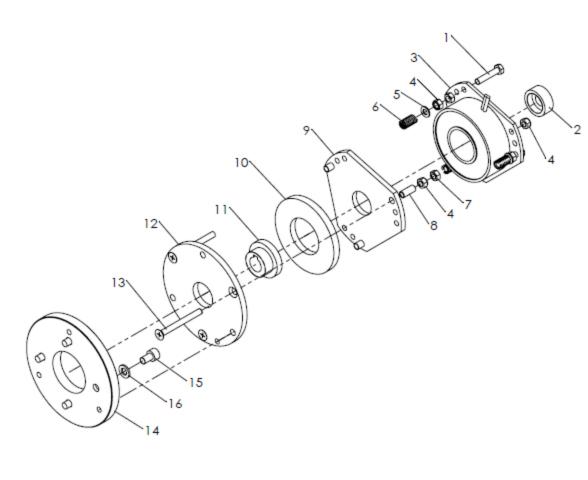

BRAKE


NO.	PARTS NO	PARTS NAME	O, LA	DRAWING NO
1	HB-0525	H-BOLT M5x25	3	
2	1602-0901	SPACER	1	EX-4907C-2
3	1309-0902	FIELD	1	
4	UN-05	U-NUT M5	9	
5	PW-05	PW M5	3	
6	1309-0913	SPRING	3	
7	HN-05	H-NUT M5	3	
8	1309-0909	COLLAR	3	
9	1309-0905	ARMATURE	1	
10	1309-0906	DISK	1	
11	1309-0907	INNER DRIVER	1	
12	1309-0908	MOUNTING PLATE	1	
13	MS-0550S	F-BOLT M5x50	3	
14	1602-0902	BASE	1	EX-4907C-1
15	CS-0610	HS-BOLT M6x10	4	
16	SW-06	SW M6	4	
17	1309-0910	BRAKE ASSY_MNBO. 6G-03 24V	1	

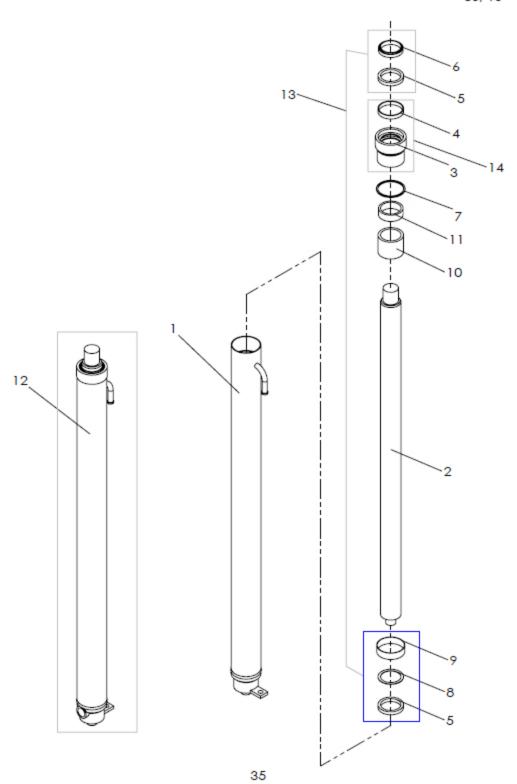

8S, 1S

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	1500-0508	CYLINDER TUBE_ ϕ 50x750st	1	
2	1500-0509	PISTON ROD_ \$\phi\$50x750st	1	
3		CYLINDER HEAD	1	
4		BUSH	1	
5		U RING	2	
6		WIPER RING	1	
7		O RING_JASO F404 2050 TYPE A	1	
8		BACK UP RING	1	
9	1500-0510	BUSH	1	
10	1500-0511	SPACER	1	
11	2101-0501	CYLINDER COLLAR_ φ 48x φ 40x15t	1	4010187
12	1420-0502	LIFT CYLINDER ASSY_ \(\phi \) 50x750ST+COLLAR	1	
13	1500-0512	PACKING SET_No. 5, 6, 7, 8, 9	1	
14	1500-0513	CYLINDER HEAD KIT_No. 3, 4	1	


LIFT CYLINDER

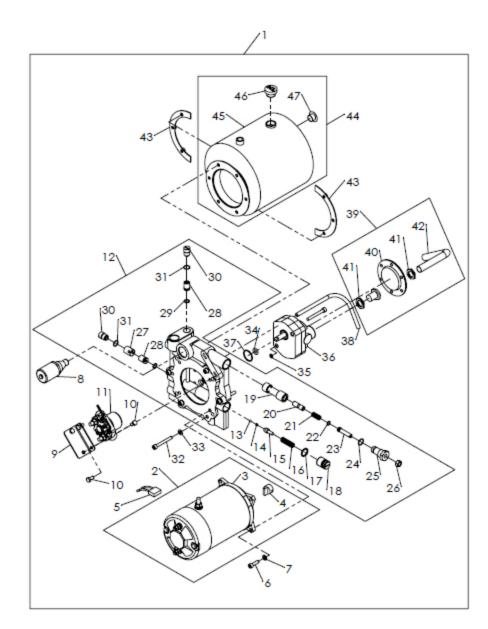

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING
1	96004-00003	POWER PACKAGE A8910203W	1	
2	93002-00007	MOTOR SET 755900P3 (DC24V) +AS510204	1	
3	93002-00006	MOTOR	1	755900P3 (DC24V)
4	9279-0011	JOINT	1	AS510204
5	9279-0018	CARBON BRUSH	2	
6	CS-0620	HS-BOLT M6x20	4	
7	SW-06	SW M6	4	
8	96000-00013	SOLENOID VALVE	1	AT812014 (DC24V)
9	95090-00004	SWITCH BRACKET	1	AS367104
10	HB-0612	H-BOLT M6x12	4	
11	95003-00015	MAGNET SWITCH	1	AA250200 (D
12	96000-00010	BASE SET AS894503	1	
13	90660-00001	STEEL BALL_3/16"	1	
14	96090-00015	DC SPRING	1	AS846904
15	96000-00011	R MOVABLE VALVE	1	AS849304
16	96090-00016	SPRING	1	AS855204
17	0RP-16	O-RING P16	1	
18	96090-00010	R ADJUSTMENT SCREW	1	AS851804
19	96090-00013	SLIP	1	AS849604
20	96090-00014	SP00L	1	AS849704
21	96090-00017	SPRING	1	AS852604
22	0RS-08	O-RING S8	1	
23	96090-00011	F ADJUSTMENT SCREW	1	AS849904
24	0RS-14	O-RING S14	1	
25	96090-00018	HOLDER	1	AS846404
26	HN-08	H-NUT M8	1	
27	96090-00009	CHECK COVER	1	AS855604
28	96000-00012	CHECK CARTRIDGE VALVE	2	AS842004
29	0RP-09	O-RING P9	2	


40 POWER PACKAGE

NO.	PARTS NO	PARTS NAME	O, LA	DRAWING NO
31	0RS-12. 5	0-RING S12.5	2	
32	CS-0650	HS-BOLT M6x50	6	
33	PW-06	PW M6	6	
34	ORG-10	O-RING G10	1	
35	ORP-06	O-RING P6	1	
36	96004-00005	GEAR PUMP	1	AZE18003 (18E TYPE)
37	0RS-25	O-RING S25	1	
38	96003-00006	RETURN PIPE	1	AS318304
39	96000-00009	SUCTION FILTER SET AS320904+M16 T=3+AS342204	1	
40	96000-00008	SUCTION FILTER	1	AS320904
41	90359-00001	VOLUME NUT M16 T=3	2	
42	96003-00005	SUCTION PIPE	1	AS342204
43	96090-00008	TANK PLATE	2	AS208304
44	96004-00006	TANK SET	1	AS1371P3 + AS211504 + AS210200
45	96004-00007	TANK	1	AS1371P3
46	96090-00006	OIL CAP	1	AS211504
47	9279-0005	LEVEL GAUGE	1	AS210200

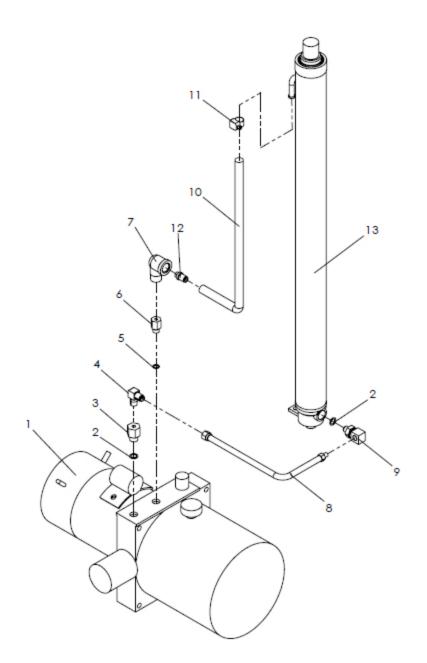


OIL PIPING

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	9278-0000	POWER PACKAGE ASSY	1	
2	0RP-11	O-RING P11	2	
3	0080-0021	J01NT_9/16-18SAExPT3/8	1	4008490
4	0080-0007	ELBOW 90° _PF1/4xPT3/8	1	
5	0RP-09	O-RING P9	1	
6	0080-0022	J01NT_7/16-20SAExPT1/4	1	4008619
7	0080-0004	STREET ELBOW_PT1/4xPT1/4	1	
8	0102-6100	HIGH PRESSURE HOSE_φ6x1000L	1	
9	2101-1102	90° VALVE CONNECTOR ELBOW_UEV90G03R02	1	
10	0101-091**	VINYL HOSE_Φ9x Φ15***	1	
11	HOSBS-16	HOSE BAND 16N	2	
12	0073-0114	HOSE NIPPLE_ ϕ 10. 5xPT1-4	1	
13		LIFT CYLINDER ASSY	1	

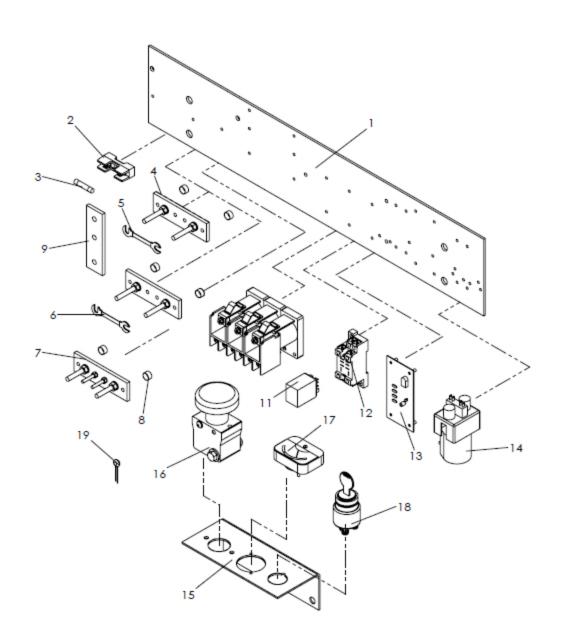


ELECTRIC PART 1

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	2101-1400	CONTROL ASSY	1	
2	9399-0001	FUSE HOLDER_F-3321 (F-10)	1	
3	9302-0005	GLASS TUBE FUSE_5A	1	
4	9398-0001	FUSE BOARD_5 × 30 × 100	2	
5	9301-0060	LINK FUSE_60A	1	
6	9301-0150	LINK FUSE_150A	1	
7	9900-0201	TERMINAL BOARD	1	
8	9902-0007	SPACER_6. 1 × 10 × 11	6	
9	9398-0012	BUS BAR	1	
10	9015-1001	MAGNET SWITCH_CM4K-2-TX-19 24V	3	
11	9050-0012	HIGH POWER RELAY_LY2-DC24V	1	
12	9099-0001	SOCKET_PTF-08A	1	
13	9801-0001	TIMER BOARD_KOLEC-T 24V	1	
14	9016-0002	MAGNET SWITCH_SW-80-974	1	
15	2101-1410	SWITCH PANEL ASSY	1	
16	9705-0019	POWER-OFF SWITCH_EMS12L	1	
17	9498-0005	ELECTRIC DISCHARGE METER_TRM-45	1	
18	9702-0001	KEY SWITCH_HI-1D	1	
19	EK00-0415	VARISTOR_TNR15G680K	1	

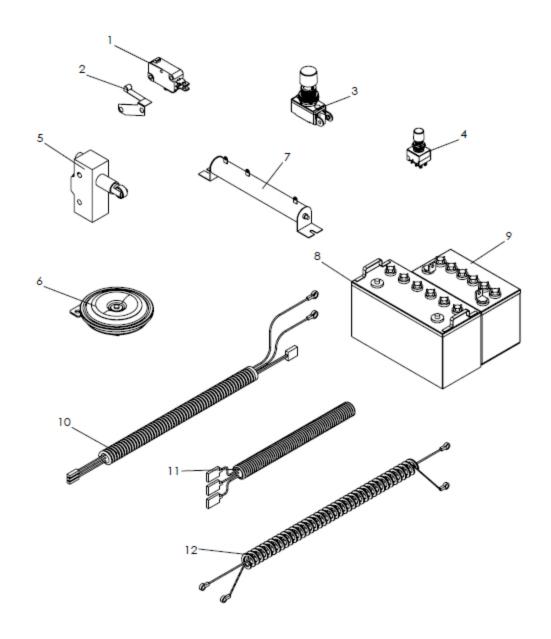

ELECTRIC PARTS 2

NO.	PARTS NO	PARTS NAME	Q' TY	DRAWING NO
1	9701-0009	MICRO SWITCH_V-10-1A5	3	
2	9701-0010	ACTUATOR_VAL	3	
3	9705-0003	PUSH BUTTON SWITCH_SB- 221NO	1	
4	9705-0018	PUSH BOTTON SWITCH_MB-2521	2	
5	9701-0006	MICROSWITCH_Z-15GQ22-B	1	
6	9905-0001	HORN_SPH-24V	1	
7	9511-0002	COATING RESISTANCE_0.3Ω- 150W CWMG	1	
8	9451-0002	BATTERY_EB-100	2	
9	9451-0006	BATTERY_EB65	1	
10	2101-1420	MAIN HARNESS	1	
11	2101-2110	HANDDLE HARNESS	1	
12	2101-1421	HANDDLE HARNESS	1	

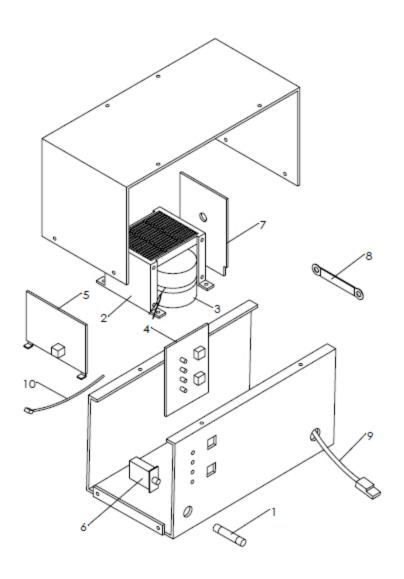

CHARGER

NO.	PARTS NO	PARTS NAME	Q' ty	DRAWING NO
1	9119-0001	FUSE_20A 30L	1	
2	9119-0002	TRANSFORMER_ ϕ 1 1. 2KVA	1	
3	9118-0003	THERMAL PROTECTOR	1	
4	9118-0004	PRINT BOARD_KSP-056-1	1	
5	9118-0005	PRINT BOARD_KSP-005-1	1	
6	9118-0006	PUSH BUTTON SWITCH_DS-681	1	
7	9118-0007	SILICON STACK_D-40N	1	
8	9118-0008	SHORT CIRCUIT PTOTECTION	1	
9	9118-0009	BATTERY CODE	1	
10	9118-0010	INPUT CODE	1	
11	9119-0000	CHARGER ASSY_KS-2420D	1	